



**BE1491**  
**Visit baby monitor**





## Manufacturer

 
Bellman & Symfon Group AB  
Södra Långebergsgatan 30  
436 32 Askim Sweden  
Phone +46 31 68 28 20  
E-mail [info@bellman.com](mailto:info@bellman.com)  
**bellman.com**



Revision: BE1491\_084MAN1.0

Date of issue: 2022-02-21

TM and © 2022 Bellman & Symfon AB. All rights reserved.

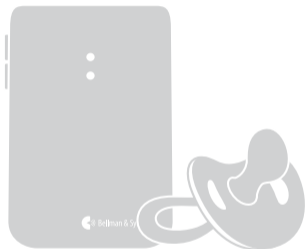


# Baby monitor

BE1491

Brugervejledning	<b>DA</b>
Benutzerhandbuch	<b>DE</b>
User manual	<b>EN</b>
Manual del usuario	<b>ES</b>
Käyttöopas	<b>FI</b>
Mode d'emploi	<b>FR</b>
Gebruiksaanwijzing	<b>NL</b>
Brukerhåndbok	<b>NO</b>
Bruksanvisning	<b>SE</b>
Installer's guide	<b>EN</b>

## Oversikt

 
På/Av og innstillinger LED-lamper Ext. trig-inngang Mikrofon

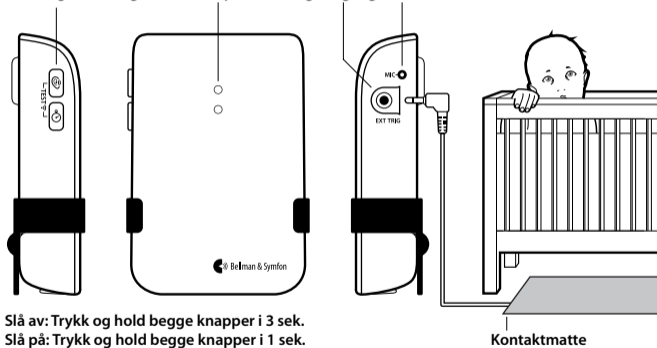

Slå av: Trykk og hold begge knapper i 3 sek.  
Slå på: Trykk og hold begge knapper i 1 sek.


## Montering

 - 1 Fjern uttrekkslappen på batteriet for å starte babyvakten.
- 2 Plasser babyvakten på nattbordet eller heng den på veggen med skruen og pluggen. Den anbefalte avstanden er 0,5 - 2 m, utenfor barnets rekkevidde.

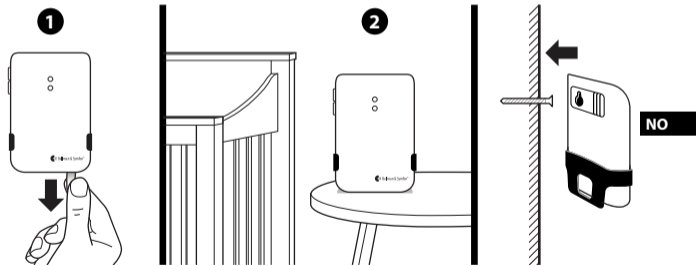

## Testing

 
- 1 Stå ved barnesengen og lag noe støy.
- 2 Visit-mottakeren tenner et smokksymbol og indikerer med lyd, lys eller vibrasjoner (avhengig av mottakeren). Hvis den ikke reagerer, må du lese avsnittet **Innstillinger**.

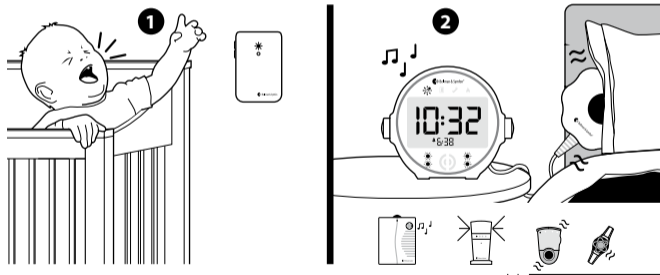


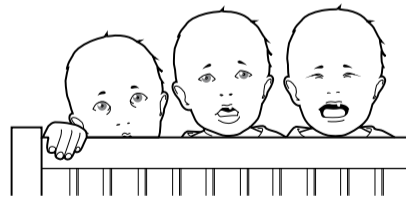 
## Innstillinger

Knappene for følsomhet og forsinkelse er plassert på babyvaktens venstre side. Når du trykker på knappen viser LED-indikatoren den aktuelle innstillingen. Trykk så gjentatte ganger for å justere innstillingen.

- Hvis babyvakten ikke blir aktivert når barnet skriker – øker du følsomheten.  
Hvis babyvakten aktiveres for lett – reduserer du følsomheten.
- Hvis babyvakten aktiveres for raskt eller for langsomt – justerer du forsinkelsen.


 <b>Følsomhet</b>	
Rød indikator	65 dB
Oransje indikator	75 dB
Grønn indikator	85 dB

 <b>Forsinkelse</b>	
Rød indikator	30 s
Oransje indikator	10 s
Grønn indikator	1 s



## Montere en kontaktmatte

 Ved å bruke en kontaktmatte kan du også få beskjed hvis barnet ditt kommer ut av sengen. Plasser matten ganske enkelt foran barnesengen, koble den til babyvakten og den vil fortelle deg om barnet ditt trår på den.

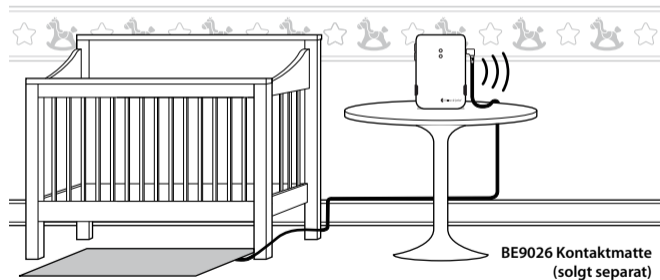

## Teknisk informasjon

<b>Strømforsyning</b>	Batteristrøm: 2 x 1.5 V AA (LR6) litium- eller alkaliske batterier.
<b>Strømforbruk</b>	Aktiv < 70 mA, Ventestilling < 400 $\mu$ A
<b>Driftstid</b>	Alkaliske ~ 6 måneder, Litium ~ 1 år
<b>Aktivering</b>	Via testknappene, mikrofonen eller en kontaktmatte via ext. trig-inngangen
<b>Radiofrekvens</b>	314.91 MHz, 433.92 MHz eller 868.3 MHz avhengig av region
<b>Maksimal utgangseffekt</b>	4,7 dBm
<b>Dekning</b>	50 - 250 m avhengig av radiofrekvens. Dekningen reduseres av vegger, store gjenstander eller andre radiosendere.
<b>Antall radiokanaler</b>	64 som standard Opp til 256 med tilleggsprogramvare.

## Tilleggsinformasjon

**!** Merk: Pass alltid på at babyvakten er utenfor barnets rekkevidde. Du må aldri plassere babyvakten i barnesengen eller lekegrinden.

<b>Bruk, transport og oppbevaring</b>	For informasjon, se <b>Installer's Guide</b> .
<b>Vedlikehold og rengjøring</b>	Vedlikeholdsfri. Rengjøres med en tørr klut. Ikke bruk husholdningsvaskemidler, aerosolspray, løsemidler, alkohol, ammoniakk eller skuremidler. Kan ikke gjenbrukes.
<b>Sikkerhet og forskrifter</b>	For informasjon, se <b>Installer's Guide</b> .
<b>Service og kundestøtte</b>	For informasjon, se <b>Installer's Guide</b> .

## Feilsøking

Hvis	Prøv dette
Et grønt lys tennes på babyvakten, men mottakeren aktiveres ikke	<ul style="list-style-type: none"><li>• Kontroller babyvaktens og mottakerens batterier og kontakter.</li><li>• Flytt mottakeren nærmere babyvakten.</li><li>• Kontroller at babyvakten og mottakeren er innstilt på samme radiokanal. Se <b>Changing the radio key</b> i Installer's Guide.</li></ul>
Babyvakten aktiveres ikke selv om barnet skriker	<ul style="list-style-type: none"><li>• Flytt babyvakten nærmere barnet eller øk mikrofonens følsomhet, se <b>Innstillinger</b>.</li><li>• <b>Merk: Pass alltid på at babyvakten er utenfor barnets rekkevidde. Du må aldri plassere babyvakten i barnesengen eller lekegrinden.</b></li></ul>

Hvis	Prøv dette
Babyvakten aktiveres for lett	<ul style="list-style-type: none"><li>• Reduser følsomheten eller flytt babyvakten lenger bort fra barnesengen, se <b>Innstillinger</b>.</li></ul>
Babyvakten aktiveres for tidlig	<ul style="list-style-type: none"><li>• Øk forsinkelsen. For mer informasjon, les avsnittet <b>Innstillinger</b>.</li></ul>
Babyvakten aktiveres for sent	<ul style="list-style-type: none"><li>• Reduser forsinkelsen. For mer informasjon, les avsnittet <b>Innstillinger</b>.</li></ul>
Mottakeren aktiveres uten noen årsak	<ul style="list-style-type: none"><li>• Det finnes antakelig et annet Visit-system installert i nærheten som utløser systemet ditt. Skift radiokanal på alle enheter. Se <b>Changing the radio key</b> i Installer's Guide.</li></ul>
To oransje lys tennes hvert 10. sekund	<ul style="list-style-type: none"><li>• Skift batteriene. Bruk kun 1,5 V AA (LR6) litium- eller alkaliske batterier.</li></ul>

# Installer's Guide



---

78 Introduction

---

80 Installation

---

82 Testing

---

84 Settings

---

85 Default indication and signals

---

86 Changing the radio key

---

90 Trouble shooting

---

92 Technical information

---



## Introduction

### Function

The baby monitor is part of the Visit alerting system that helps people with hearing loss to notice signals in their home. When your child cries, the baby monitor signals the Visit receiver that notifies you with sound, lights or vibrations (depending on the receiver). This way you are always close to your baby.

### Activation

 
The baby monitor can be activated by either:

- The test buttons (press simultaneously)
- The built-in microphone
- The BE9026 Contact mat accessory (connected to the Ext trig input)

### Settings


The baby monitor allows you to adjust the sensitivity and delay and you can set a unique signal for each child, so you know who needs your attention.

## Overview

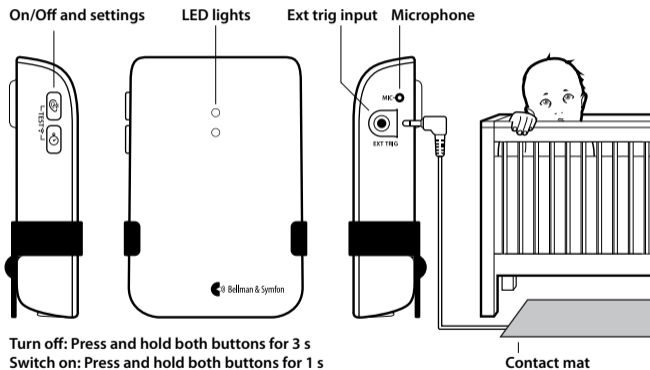


## Installation

 - 1 Remove the battery pull tab to start the baby monitor.
- 2 Place the baby monitor on the nightstand or hang it on the wall with the screw and plug. The recommended distance is 0.5 - 2 m, out of reach from the child.

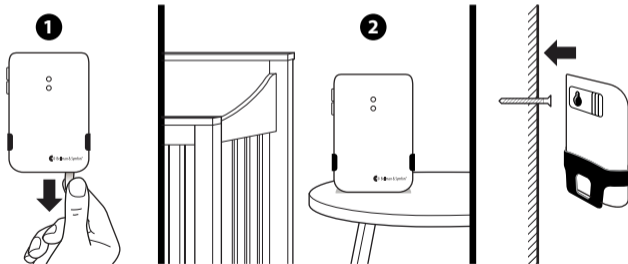

## Installing a contact mat

 
By using a contact mat, you can also be notified if your child gets out of bed. Just place the mat in front of the crib, connect it to the baby monitor and it will tell you when your child steps on it.

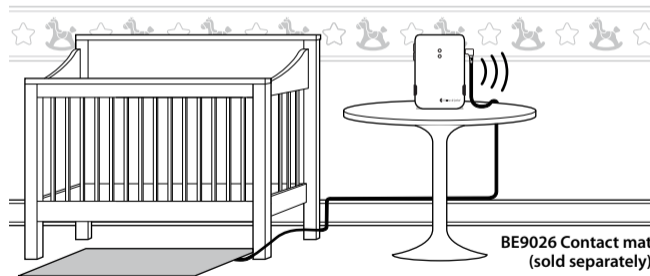

BE9026 Contact mat  
(sold separately)

## Testing

 - 1 Stand by the child's bed and make a noise.
- 2 The Visit receiver lights up a pacifier symbol and indicates with sound, lights or vibrations (depending on the receiver). If it doesn't react, read the section **Advanced testing**.

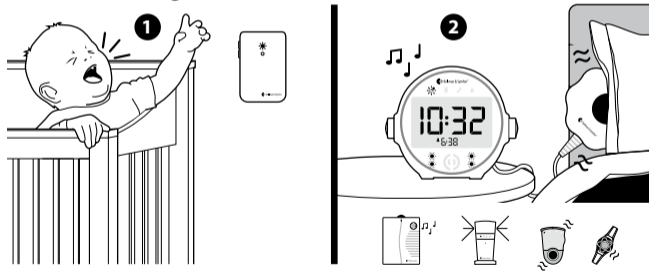

## Advanced testing

Testing the baby monitor is easy. First, make sure that the baby monitor is installed properly. For instructions, read the section **Installation**.

### Using the test button

Press both test buttons simultaneously.

- 1 The baby monitor's LED lights up to show that a radio signal is transmitted.
- 2 The receiver's pacifier symbol lights up to show that the signal was received.

### Using the microphone

Activate the baby monitor by whistling or speaking into the microphone.

- 1 The baby monitor's LED lights up to show that a radio signal is transmitted.  
*If you have adjusted the delay, it will be postponed as shown on page 84.*
- 2 The receiver's pacifier symbol lights up to show that the signal was received.  
*If you have customized the signal pattern, it will blink as shown on page 88.*

If it doesn't work as described, read the section **Troubleshooting**.

## Settings

The buttons for sensitivity and delay are located on the baby monitor's left side. When you press the button, the LED shows the current setting. Then press repeatedly to adjust the setting.

- If the baby monitor isn't activated when the baby cries – increase the sensitivity.  
If the baby monitor is activated too easily – reduce the sensitivity.
- If the baby monitor is activated too fast or too slow – adjust the delay.



 
### Sensitivity

Red LED	65 dB
Orange LED	75 dB
Green LED	85 dB



### Delay

Red LED	30 s
Orange LED	10 s
Green LED	1 s

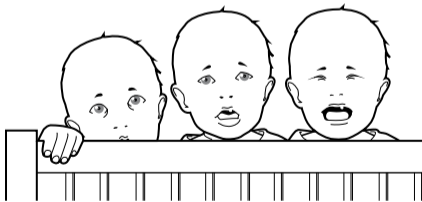

## Default indication and signal

### Transmitter indication

When the baby monitor is activated, the LED indicator lights up in green. This means that the batteries are in good condition. If an orange light appears, it's time to change the batteries. Only use 1.5 V AA (LR6) lithium or alkaline batteries.

### Receiver signal

When a receiver is activated, it signals with sound, flashes or vibrations. The default signal pattern is as follows:

**Signal pattern**  868/315 MHz  433 MHz

Baby monitor		Receiver signal pattern			
Source	LED	LED	Sound	Vibration	Flash
Baby voice	Green, top	Orange light	Baby melody	Fast	Yes
Contact mat	Green, bottom	Green light	1 x door chime, low	Slow	Yes
Baby voice	Green, top	Orange light	Baby melody	Long	Yes
Contact mat	Green, bottom	Green light	1 x door chime, low	Long	Yes

 
## Changing the radio key

If you install multiple systems, you can set a unique radio key for each system to avoid interference. Move any radio key switch **A** to the up=on position to change radio key.

### **Please note:**

 
All Visit products within the same system must be set to the same radio key in order to operate as a group.

All radio key switches are positioned down=off per default.

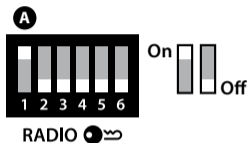



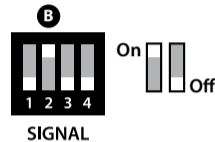

## Customizing the signal





The baby monitor controls the signal pattern on the receiver. By moving a signal switch **B** up=on you can set a unique signal for each baby. Note that you need to move the other switches down.



### Signal output for 868 MHz and 315 MHz

Baby monitor		Receiver signal pattern			
Switch	Source	LED	Sound	Vibration	Flash
 1 2 3 4	Test button or Baby monitor 1	Orange light	Baby melody	Fast ■■■■■■	Yes
	Contact mat 1	Green light	1 x door chime, low	Slow ■□□□	Yes
 1 2 3 4	Test button or Baby monitor 2	2 x orange blinks	Baby melody	Fast ■■■■■■	Yes
	Contact mat 2	2 x green blinks	2 x door chime, low	Slow ■□□□	Yes
 1 2 3 4	Test button or Baby monitor 3	3 x orange blinks	Baby melody	Fast ■■■■■■	Yes
	Contact mat 3	3 x orange blinks	Baby melody	Fast ■■■■■■	Yes
 1 2 3 4	Test button or Baby monitor 4	Orange blinks	Baby melody	Fast ■■■■■■	Yes
	Contact mat 4	Orange blinks	Baby melody	Fast ■■■■■■	Yes

### Signal output for 433 MHz

Baby monitor		Receiver signal pattern			
Switch	Source	LED	Sound	Vibration	Flash
 1 2 3 4	Test button or Baby monitor 1	Orange light	Baby melody	Long ■□	Yes
	Contact mat 1	Green light	1 x door chime, low	Long ■□	Yes
 1 2 3 4	Test button or Baby monitor 2	Orange light	2x ring signal, low	Medium ■□■□	Yes
	Contact mat 2	Green light	1x ring signal, high	Medium ■□■□	Yes
 1 2 3 4	Test button or Baby monitor 3	Orange light	2x door chime, low	Long ■□	Yes
	Contact mat 3	Orange light	2x door chime, low	Long ■□	Yes
 1 2 3 4	Test button or Baby monitor 4	Orange light	Baby melody	Long ■□	Yes
	Contact mat 4	Orange light	Baby melody	Long ■□	Yes

## Trouble shooting


If	Try this
A green light appears on the baby monitor but the receiver is not activated	<ul style="list-style-type: none"><li>• Check the baby monitor's and the receiver's batteries and plugs.</li><li>• Move the receiver closer to the baby monitor.</li><li>• Check that the baby monitor and the receiver are set to the same radio key. For more information, read the section <b>Changing the radio key</b>.</li></ul>
The baby monitor is not activated even though the baby is crying	<ul style="list-style-type: none"><li>• Move the baby monitor closer to the baby or increase the microphone's sensitivity, see <b>Settings</b>.</li><li>• <b>Please note: Always make sure the baby monitor is out of the child's reach. Never place the baby monitor in the child's crib or playpen.</b></li></ul>

If	Try this
The baby monitor is activated <i>too easily</i>	<ul style="list-style-type: none"><li>• Reduce the sensitivity or move the baby monitor further away from the crib, see <b>Settings</b>.</li></ul>
The baby monitor is activated <i>too fast</i>	<ul style="list-style-type: none"><li>• Increase the delay. For more information, read the section <b>Settings</b>.</li></ul>
The baby monitor is activated <i>too slow</i>	<ul style="list-style-type: none"><li>• Reduce the delay. For more information, read the section <b>Settings</b>.</li></ul>
The receiver is activated for no reason	<ul style="list-style-type: none"><li>• There is probably another Visit system nearby that triggers your system. Change the radio key on all units, see <b>Changing the radio key</b>.</li></ul>
Two orange lights appear every 10s	<ul style="list-style-type: none"><li>• Change the batteries. Only use 1.5 V AA (LR6) lithium or alkaline batteries.</li></ul>

## Technical information

Power supply	Battery power: 2 x 1.5 V AA (LR6) lithium or alkaline batteries.
Power consumption	Active < 70 mA, Idle position < 400 µA
Operating time	Alkaline ~ 6 months, Lithium ~ 1 year
Activation	Via the test buttons, microphone or a contact mat via the ext trig
Radio frequency	314.91 MHz, 433.92 MHz or 868.3 MHz depending on region
Coverage	50 - 250m (55 - 273yd) depending on radio frequency. Coverage is reduced by walls, large objects and other radio transmitters.
Number of radio keys	64 as standard. Up to 256 with optional software.

## Additional information

Security	 Always make sure the baby monitor is out of the child's reach. Never place the baby monitor in the child's crib or playpen.
Operating temperature	0° – 35° C, 32° – 95° F
Transport and storage temp.	-10° – 50° C, 14° – 122° F
Relative humidity	15% – 90% (non condensing)
Maintenance and cleaning	Maintenance free. Clean with a dry cloth. Don't use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.
Warranty and service	If the product appears to be damaged or doesn't function properly, follow the advice in this booklet. If it still doesn't function properly, contact your retailer for info about obtaining warranty service.

## FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: WMSBETXBC

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For a complete Declaration of Conformity please contact the Bellman & Symfon European office.

## Industry Canada statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
(1) This device may not cause interfer-

ence.(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :  
(1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with the Canadian ICES-003.

IC: 6693A-BETXTE2

## Zusätzliche Information

Nur Innen verwenden. Wartungsfrei. Reinigung mit einem nur leicht feuchten Tuch.

HMV 16.99.09.0045