




- ⓔ Model overview
- Ⓓ Model Übersicht
- Ⓔ Visión general del modelo
- Ⓕ Vue d'ensemble du modèle


- Ⓐ Modellöversikt
- Ⓝ Modelloversikt
- Ⓙ Modeloversigt
- Ⓕ Mallikatsaus

- Ⓝ Modeloverzicht
- Ⓘ Panoramica del modello
- Ⓟ Visão geral do modelo
- Ⓒ Επισκόπηση μοντέλου


- Ⓟ Informacje o modelu
- Ⓒ Popis modelu
- Ⓗ Modell áttekintése
- Ⓐ Prehľad modelu

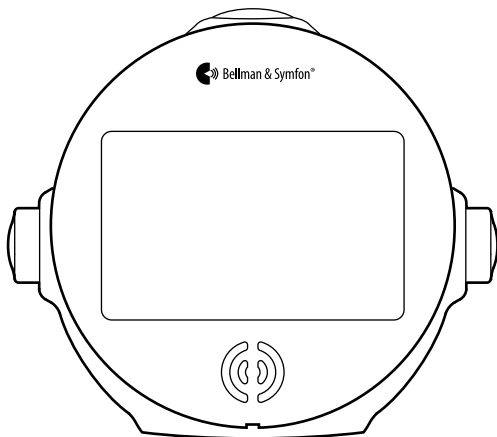

**Classic**

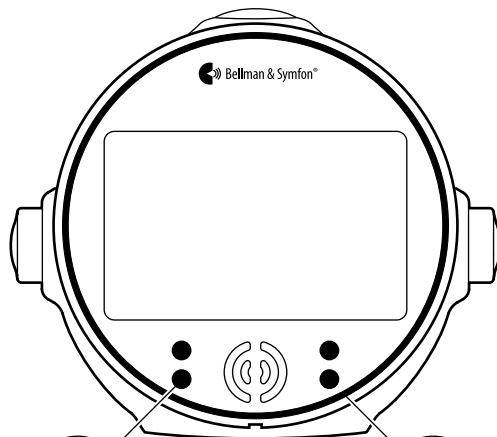


**Pro**

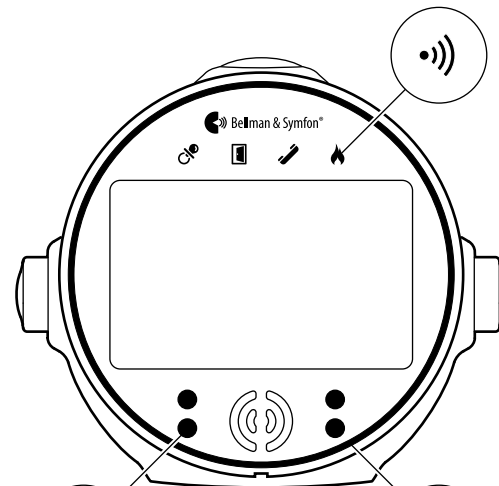


**Visit**

- EN** Remove the battery tab
- DE** Sicherungstreifen herausziehen
- ES** Retirar la lengüeta de las pilas
- FR** Retirer la languette de la batterie
- NL** Het batterijlipje verwijderen
- IT** Rimuovere la linguetta della batteria
- PT** Retire a patilha da bateria
- GR** Αφαιρέστε το προστατευτικό μπαταρίας


- SE** Dra bort batterilappen
- NO** Fjern batterimerket
- DK** Aftagning af batteridæksel
- FI** Poista pariston suojaliuska
- PL** Usuń pasek baterii
- CZ** Vyjmutí ochranného štítku baterie
- HU** Vegye ki az akkumulátor címkéjét
- SK** Vyberte plôšku batérie

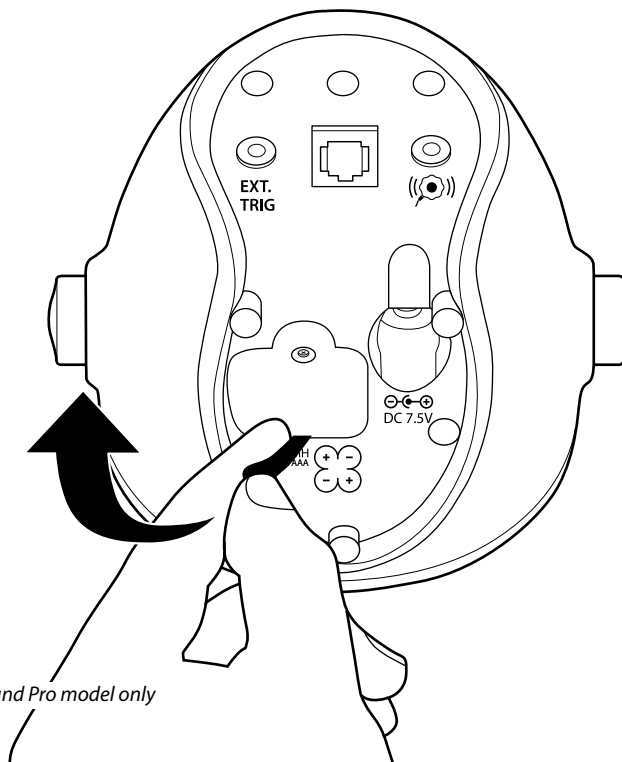

*Visit and Pro model only*

 


- |   |                                      |
|---|--------------------------------------|
| <b>(EN)</b> Connect the alarm clock       | <b>(SE)</b> Anslut väckarklockan     |
| <b>(DE)</b> Verbinden Sie den Wecker      | <b>(NO)</b> Koble til vekkerklokken  |
| <b>(ES)</b> Conectar el reloj despertador | <b>(DK)</b> Tilslutning af vækkeuret |
| <b>(FR)</b> Brancher le réveil            | <b>(FI)</b> Kytke herätyskello       |
| <b>(NL)</b> De wekker aansluiten          | <b>(PL)</b> Podłącz budzik           |
| <b>(IT)</b> Collegare la sveglia          | <b>(CZ)</b> Připojení budíku         |
| <b>(PT)</b> Ligue o despertador           | <b>(HU)</b> Csatlakoztassa           |
| <b>(GR)</b> Συνδέστε το ξυπνητήρι         | <b>(SK)</b> Pripojte budík           |

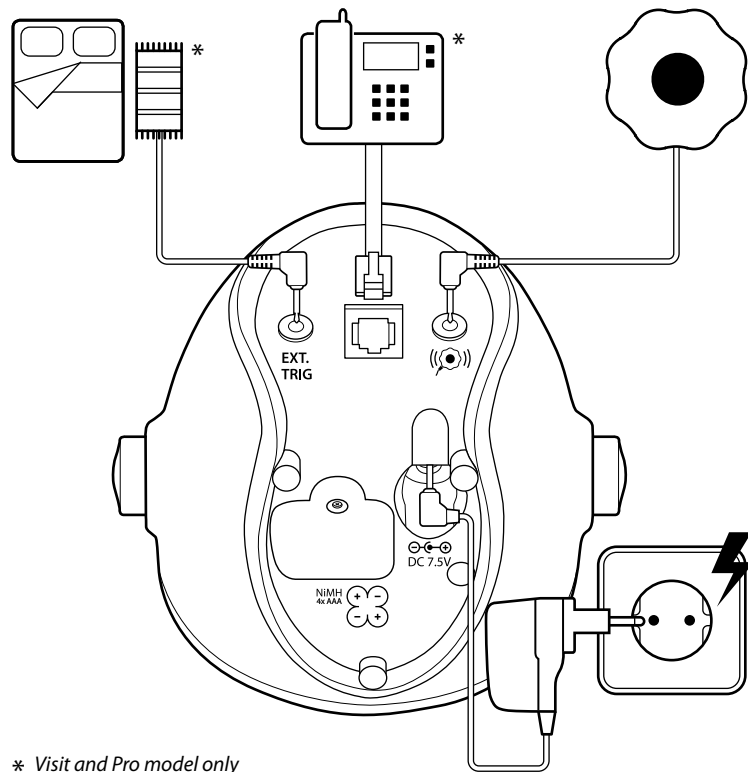




- |                                      |                                  |
|--------------------------------------|----------------------------------|
| <b>(EN)</b> Set the time             | <b>(SE)</b> Ställ in tid         |
| <b>(DE)</b> Stellen Sie die Zeit ein | <b>(NO)</b> Innstill tiden       |
| <b>(ES)</b> Ajustar la hora          | <b>(DK)</b> Indstilling af tiden |
| <b>(FR)</b> Régler l'heure           | <b>(FI)</b> Aseta aika           |
| <b>(NL)</b> De tijd instellen        | <b>(PL)</b> Ustaw godzinę        |
| <b>(IT)</b> Impostare l'ora          | <b>(CZ)</b> Nastavení času       |
| <b>(PT)</b> Acerte a hora            | <b>(HU)</b> Idő beállítása       |
| <b>(GR)</b> Ρύθμιση ώρας             | <b>(SK)</b> Nastavte čas         |

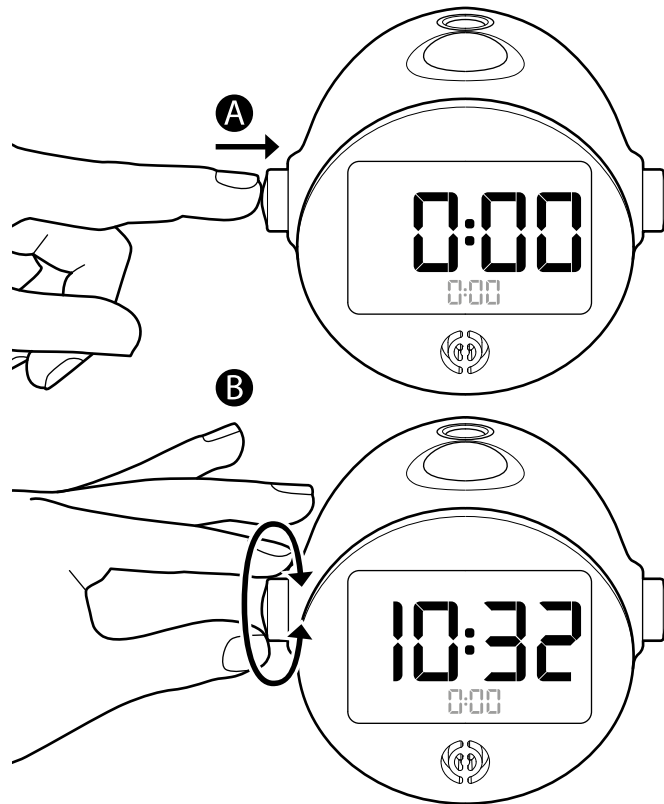




- |                                       |                                  |
|---------------------------------------|----------------------------------|
| <b>EN</b> Set the alarm               | <b>SE</b> Ställ in väckning      |
| <b>DE</b> Stellen Sie den Alarm ein   | <b>NO</b> Innstill alarmen       |
| <b>ES</b> Ajustar la alarma           | <b>DK</b> Indstilling af alarmen |
| <b>FR</b> Régler l'alarme             | <b>FI</b> Aseta herätys          |
| <b>NL</b> Het alarm instellen         | <b>PL</b> Ustaw alarm            |
| <b>IT</b> Impostare la sveglia        | <b>CZ</b> Nastavení alarmu       |
| <b>PT</b> Definir a hora de despertar | <b>HU</b> Ébresztés beállítása   |
| <b>GR</b> Ρύθμιση ξυπνητηριού         | <b>SK</b> Nastavte budík         |

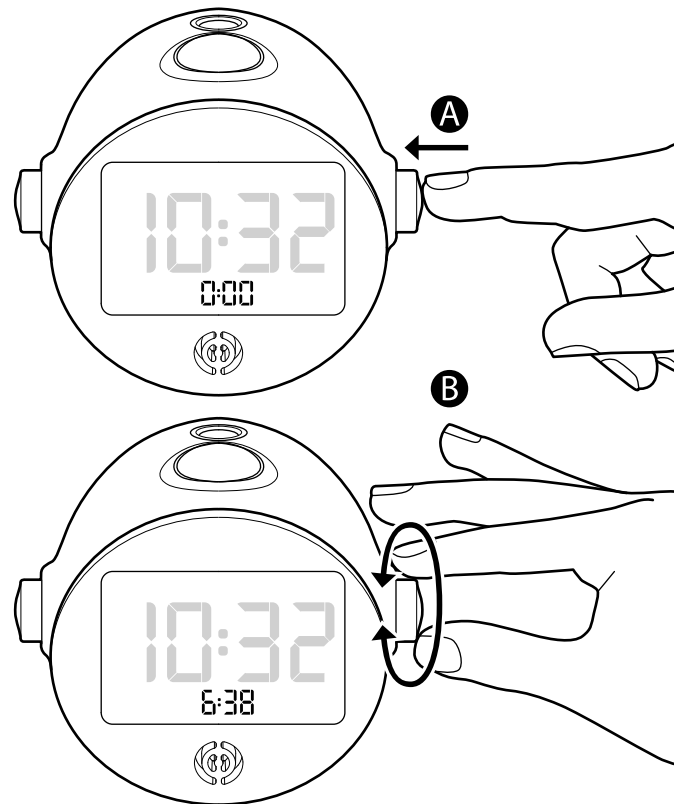




- |                                       |                                 |
|---------------------------------------|---------------------------------|
| <b>EN</b> Activate the alarm          | <b>SE</b> Aktivera väckning     |
| <b>DE</b> Aktivieren Sie den Alarm    | <b>NO</b> Aktiver alarmen       |
| <b>ES</b> Activar la alarma           | <b>DK</b> Aktivering af alarmen |
| <b>FR</b> Activer l'alarme            | <b>FI</b> Aktivoi herätys       |
| <b>NL</b> Het alarm activeren         | <b>PL</b> Włącz alarm           |
| <b>IT</b> Attivare la sveglia         | <b>CZ</b> Aktivace alarmu       |
| <b>PT</b> Ative o alarme              | <b>HU</b> Ébresztés aktiválása  |
| <b>GR</b> Ενεργοποίηση<br>ξυπνητηριού | <b>SK</b> Zapnite budík         |

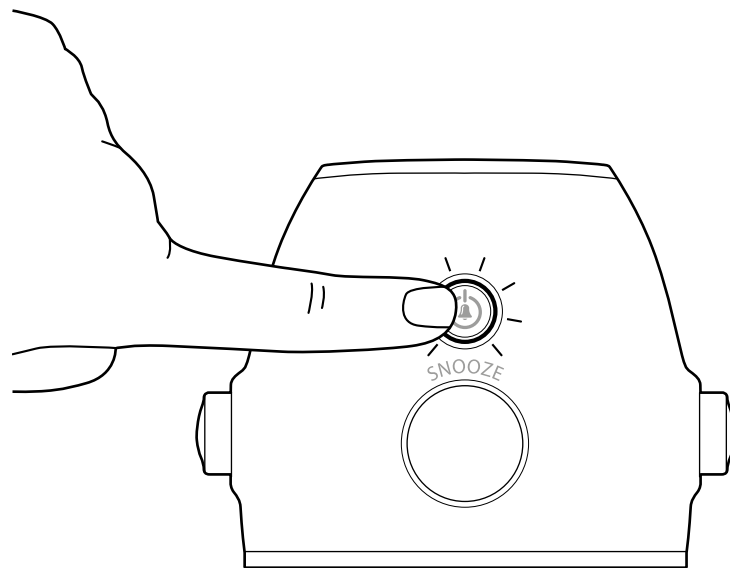

## SNOOZE

<b>EN</b> Snooze	<b>SE</b> Snooza
<b>DE</b> Schlummern	<b>NO</b> Slumre
<b>ES</b> Repetir	<b>DK</b> Slumre
<b>FR</b> Répétition	<b>FI</b> Torkku
<b>NL</b> Snooze	<b>PL</b> Drzemka
<b>IT</b> Snooze	<b>CZ</b> Odložení buzení
<b>PT</b> Snooze	<b>HU</b> Szundi
<b>GR</b> Αναβολή	<b>SK</b> Opakované budenie

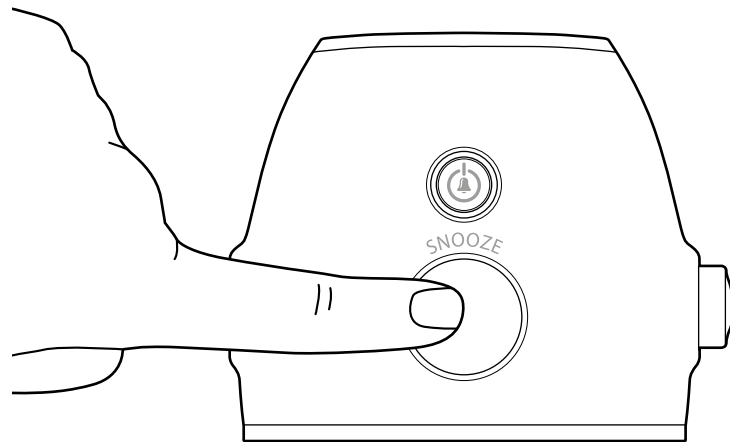





Ⓔ **EN** Night light

Ⓔ **DE** Nachlicht

Ⓔ **ES** Luz nocturna

Ⓔ **FR** Veilleuse

Ⓔ **NL** Nachlichtje

Ⓔ **IT** Luce notturna

Ⓔ **PT** Luz noturna

Ⓔ **GR** Φως νυχτός

Ⓔ **SE** Nattlampa

Ⓔ **NO** Nattlys

Ⓔ **DK** Natlys


Ⓔ **FI** Yövalo

Ⓔ **PL** Lampka nocna

Ⓔ **CZ** Noční osvětlení

Ⓔ **HU** Éjjeli fény

Ⓔ **SK** Nočné svetlo

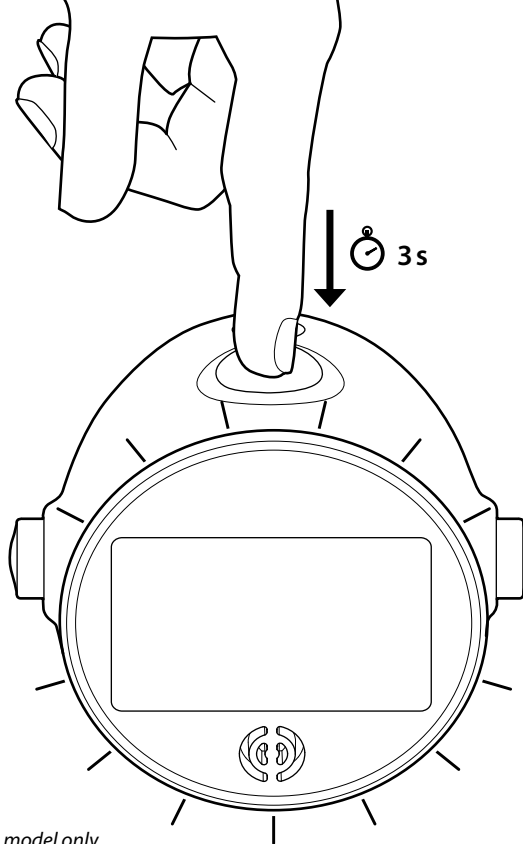


*Visit and Pro model only*



<b>(EN)</b> Settings	<b>(SE)</b> Inställningar
<b>(DE)</b> Einstellungen	<b>(NO)</b> Innstillinger
<b>(ES)</b> Ajustes	<b>(DK)</b> Indstillinger
<b>(FR)</b> Réglages	<b>(FI)</b> Asetukset
<b>(NL)</b> Instellingen	<b>(PL)</b> Ustawienia
<b>(IT)</b> Impostazioni	<b>(CZ)</b> Nastavení
<b>(PT)</b> Configurações	<b>(HU)</b> Beállítások
<b>(GR)</b> Ρυθμίσεις	<b>(SK)</b> Nastavenia

<b>EN</b> Brightness	<b>SE</b> Ljusstyrka	<b>EN</b> Time format	<b>SE</b> Tidsformat
<b>DE</b> Helligkeit	<b>NO</b> Lysstyrke	<b>DE</b> Zeitformat	<b>NO</b> Tidsformat
<b>ES</b> Brillo	<b>DK</b> Lysstyrke	<b>ES</b> Formato de la hora	<b>DK</b> Tidsformat
<b>FR</b> Luminosité	<b>FI</b> Kirkkaus	<b>FR</b> Format de l'heure	<b>FI</b> Formaatti
<b>NL</b> Helderheid	<b>PL</b> Jasność	<b>NL</b> Tijdsindeling	<b>PL</b> Format godziny
<b>IT</b> Luminosità	<b>CZ</b> Jas	<b>IT</b> Formato ora	<b>CZ</b> Formát času
<b>PT</b> Luminosidade	<b>HU</b> Fényerő	<b>PT</b> Formato da hora	<b>HU</b> Időformátum
<b>GR</b> Φωτεινότητα	<b>SK</b> Jas	<b>GR</b> Μορφή ώρας	<b>SK</b> Formát času

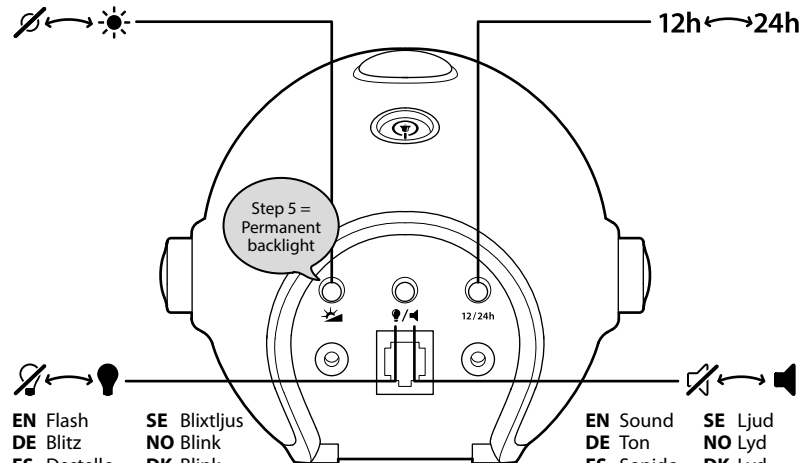


<b>EN</b> Flash	<b>SE</b> Blixtljus	<b>EN</b> Sound	<b>SE</b> Ljud
<b>DE</b> Blitz	<b>NO</b> Blink	<b>DE</b> Ton	<b>NO</b> Lyd
<b>ES</b> Destello	<b>DK</b> Blink	<b>ES</b> Sonido	<b>DK</b> Lyd
<b>FR</b> Clignotant	<b>FI</b> Vilkkuvalo	<b>FR</b> Son	<b>FI</b> Ääni
<b>NL</b> Flits	<b>PL</b> Miganie	<b>NL</b> Geluid	<b>PL</b> Dźwięk
<b>IT</b> Flash	<b>CZ</b> Blikání	<b>IT</b> Suono	<b>CZ</b> Zvuk
<b>PT</b> Luz	<b>HU</b> Villanófény	<b>PT</b> Som	<b>HU</b> Hang
<b>GR</b> Αναλαμπή	<b>SK</b> Blesk	<b>GR</b> Ήχος	<b>SK</b> Hlasitost

*Visit and Pro model only*

## VISIT MODEL

- |   |  |
|---|--|
| <b>(EN)</b> Pairing with a Visit transmitter        | <b>(SE)</b> Parkoppla med en Visitsändare  |
| <b>(DE)</b> Paaren mit einem Visit Sender           | <b>(NO)</b> Pare med en Visit-sender       |
| <b>(ES)</b> Se combina con un transmisor de Visitas | <b>(DK)</b> Parring med en Visit-sender    |
| <b>(FR)</b> Couplage avec un émetteur Visit         | <b>(FI)</b> Yhdistäminen Visit-lähettimeen |
| <b>(NL)</b> Koppelen aan een Visit-zender           | <b>(PL)</b> Parowanie z nadajnikiem Visit  |
| <b>(IT)</b> Abbinamento con un trasmettitore Visit  | <b>(CZ)</b> Párování s vysílačem Visit     |
| <b>(PT)</b> Emparelhamento com um transmissor Visit | <b>(HU)</b> Párosítás Visit jeladóval      |
| <b>(GR)</b> Σύζευξη με πομπό Visit                  | <b>(SK)</b> Spárovanie s vysílačom Visit   |

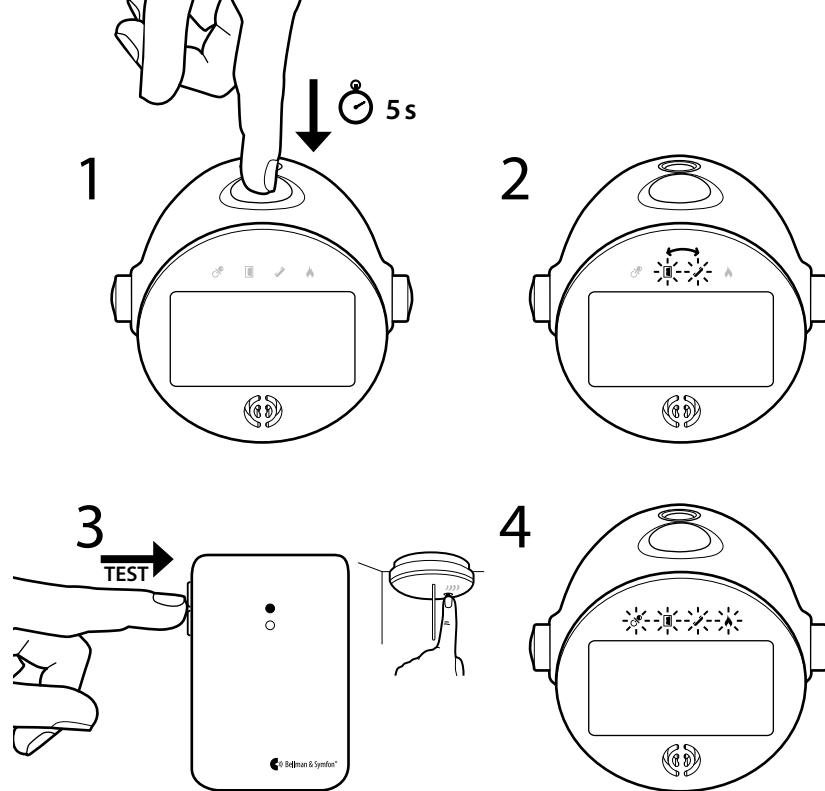

*Pairing is only possible on the Visit model.*

EN Time  
DE Zeit  
ES Hora  
FR Heure  
NL Tijd  
IT Ora  
PT Hora  
GR Ώρα

SE Tid  
NO Tid  
DK Tid  
FI Aika  
PL Czas  
CZ Čas  
HU Idő  
SK Čas

EN Snooze  
DE Schlummern  
ES Repetición  
FR Répétition  
NL Snooze  
IT Snooze  
PT Snooze  
GR Αναβολή

SE Snooze  
NO Slumre  
DK Slumre  
FI Torokku  
PL Drzemka  
CZ Odložení buzení  
HU Szundi  
SK Opakované budenie

EN Alarm  
DE Alarm  
ES Alarma  
FR Alarme  
NL Alarm  
IT Sveglia  
PT Alarme  
GR Ξυπνητήρι

SE Alarm  
NO Alarm  
DK Alarm  
FI Herätys  
PL Alarm  
CZ Alarm  
HU Ébresztés  
SK Budík

EN Brightness  
DE Helligkeit  
ES Brillo  
FR Luminosité  
NL Helderheid  
IT Luminosità  
PT Luminosidade  
GR Φωτεινότητα

SE Ljusstyrka  
NO Lysstyrke  
DK Lysstyrke  
FI Kirkkaus  
PL Jasność  
CZ Jas  
HU Fényerő  
SK Jas

EN Flash/Sound  
DE Blitz/Ton  
ES Destello/Sonido  
FR Clignotant/Son  
NL Flits/Geluid  
IT Flash/Suono  
PT Luz/Som  
GR Αναλαμπή/Ήχο

SE Blixtljus/Ljud  
NO Lys/Lyd  
DK Blink/Lyd  
FI Vilkku/Ääni  
PL Miganie/dźwięk  
CZ Blikání/Zvuk  
HU Villanófény/hang  
SK Blesku/Zvuk

EN Format  
DE Zeitformat  
ES Formato  
FR Format  
NL Indeling  
IT Formato  
PT Formato  
GR Μορφή

SE Format  
NO Format  
DK Format  
FI Formaatti  
PL Format  
CZ Formát  
HU Formátum  
SK Formát



EN Flash  
DE LED-Blitz  
ES Destello  
FR Clignotant  
NL Flits  
IT Flash  
PT Luz  
GR Αναβοσβήνει


SE Blixtljus  
NO Lys  
DK Blink  
FI Vilkku  
PL Miganie  
CZ Blikání  
HU Villanófény  
SK Blesk

EN Speaker  
DE Lautsprecher  
ES Altavoz  
FR Haut-parleur  
NL Luidspreker  
IT Altoparlante  
PT Altifalante  
GR Ηχείο

SE Högtalare  
NO Høytaler  
DK Højtaler  
FI Kaiutin  
PL Głośnik  
CZ Reproduktor  
HU Hangszóró  
SK Reproduktor

EN Night light  
DE Nachtlicht  
ES Luz nocturna  
FR Veilleuse  
NL Nachtluchtje  
IT luce notturna  
PT Luz noturna  
GR Νυχτερινό φως

SE Nattlampa  
NO Nattllys  
DK Natlys  
FI Yövalo  
PL Lampka nocna  
CZ Noční osvětlení  
HU Éjjeli fény  
SK Nočné svetlo

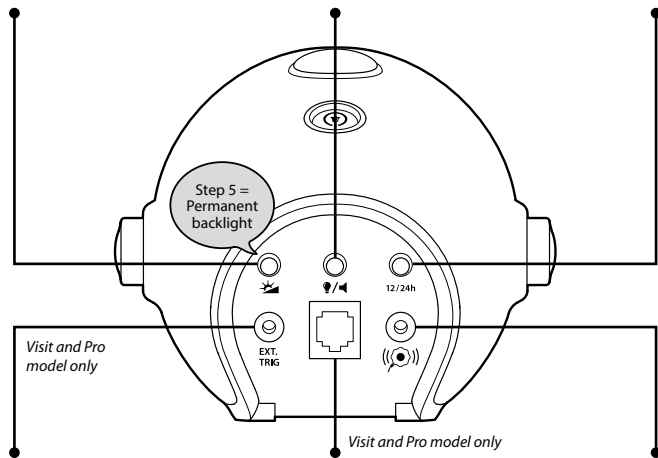

EN Ext. trig.  
DE Trigger  
ES Activ. ext.  
FR Déclench.ext.  
NL Ext. trig.  
IT Trig.est.  
PT Gat. ext.  
GR Σκανό.

SE Ext. trig.  
NO Ekst. utl.  
DK Ekst. udl.  
FI Ulk. lauk.  
PL Wyzw. zewn.  
CZ Ext. sig.  
HU Külső akt.  
SK Ext. spúš.

EN Telephone  
DE Telefon  
ES Teléfono  
FR Téléphone  
NL Telefoon  
IT Telefono  
PT Telefone  
GR Τηλέφωνο

SE Telefon  
NO Telefon  
DK Telefon  
FI Puhelin  
PL Telefon  
CZ Telefon  
HU Telefon  
SK Telefón

EN Bed shaker  
DE Vibrationskissen  
ES Vibrador de cama  
FR Vibreur de matelas  
NL Trilschijf  
IT Bed shaker  
PT Vibração cama  
GR Δόνηση κρεβατιού

SE Sängvibrator  
NO Sengevibrator  
DK Sengevibrator  
FI Tärstin  
PL Wibrator łóżkowy  
CZ Vibrační doplněk  
HU Ágyrezgető  
SK Vibrationné zariadenie



<b>EN</b>	Technical information	25	<b>SE</b>	Teknisk information	33
<b>DE</b>	Technische Information	26	<b>NO</b>	Teknisk informasjon	34
<b>ES</b>	Información técnica	27	<b>DK</b>	Tekniske specifikationer	35
<b>FR</b>	Informations techniques	28	<b>FI</b>	Tekniset tiedot	36
<b>NL</b>	Technische informatie	29	<b>PL</b>	Informacje techniczne	37
<b>IT</b>	Informazioni tecniche	30	<b>CZ</b>	Technické údaje	38
<b>PT</b>	Informação técnica	31	<b>HU</b>	Műszaki adatok	39
<b>GR</b>	Τεχνικές πληροφορίες	32	<b>SK</b>	Technické údaje	40

## Teknisk informasjon



Nät drift	7,5 VDC / 1,5 A
Reservbatteri	4 x 1,2 V AAA NiMH laddningsbara batterier (Medfølger ej Classicmodellen) Drifttid: > 24 h Laddningstid: 10 h (från tomt batteri till fullt laddat)
Storlek och vikt	121 mm x 108 mm x 92 mm, 390 g inklusive batterier
Ljudsignal	100 dB(A) @ 10 cm, 94 dB(A) @ 30 cm, multifrekvenssignal 950 - 3000 Hz Alarm timeout: 20 min
Ljussignal	Fyra högentensivt pulserande LED-lampor (Finns ej på Classicmodellen)
Sängvibrator	Vibratorstyrka: 2,0 – 4,0 VDC.
Snoozeintervall	Minskande intervaller från 9 till 2 min i steg om 2 min. Timeout: 20 min
Urtavla	Twisted Nematic (TN) LCD. Aktiveras av snooze knappen. Justerbar bakgrundsbelysning i 4 steg. Steg 5 = permanent bakgrundsbelysning.
Nattljus	Electro Luminescent (EL) ljus. Timeout: 1 h. (Finns ej på Classicmodellen)
Ingångar	Modulär RJ-11 kontakt för analogt telenät 26-120 V RMS, 15-100 Hz Extern trigg för 3,5 mm stereokontakt (finns ej på Classicmodellen)
Knappar och kontroller	Separata vrid- och tryckbara knappar för tid och väckning, snooze knapp, knapp för justering av bakgrundsbelysning, tidsformat, alarm, blyttljus och ljudsignal (Finns ej på Classicmodellen)
Radiofrekvens	868,3 MHz (endast Visitmodellen)
Räckvidd	< 250 m fri sikt (endast Visitmodellen). Räckvidden reduceras av väggar, stora objekt samt andra radiosändare som t.ex. TV och mobiltelefon.

## Övrig informasjon

Användning, transport och lagring:	För informasjon, se <b>Additional information (EN)</b> .
Rengöring och skötsel	Underhållsfri. Rengör endast med mjuk och luddfri duk. Använd inte fönsterputsmedel, rengöringsmedel, spray, lösningsmedel, alkohol, ammoniak eller produkter som innehåller slipmedel.
Viktig säkerhetsinformasjon	För att koppla ur strömmen helt, se till att strömaggregatets kontakt är utdragen ur vägguttaget. Strömaggregatet får inte blockeras och skall alltid vara lättåtkomligt. Märkningsinformasjon är placerad på produktens undersida. För byte av reservbatterier hänvisas till auktoriserad servicepersonal. Använd enbart batterier av typ, Märkning: 1.2V 600mAh NiMH. Använd bara batterier av den typ och märke som specificeras i bruksanvisningen. Andra batterier kan resultera i brand eller personskada.
Service och garanti	Om väckarklockan verkar vara skadad eller inte fungerar, kontakta din återförsäljare för informasjon om service och garanti.

## Teknisk informasjon



Nettstrøm	7,5 VDC / 1,5 A
Back-up batteristøm	4 x 1.2 V AAA NiMH oppladbare batterier (Følger ikke med Classic) Driftstid: 24 t Ladetid: 10 t fra utladet til fulladet
Mål og vekt	121 mm x 108 mm x 92 mm, 390 g (inkl. batterier)
Alarmsignal	100 dB (A) @ 10 cm, 94 dB (A) @ 30 cm, multi-frekvens 950 - 3000 Hz Tidsavbrudd alarm: 20 min
Blinkende lyssignal	4 pulserende høyintensitets LED-lys (Ikke tilgjengelig på Classic)
Sengevibrator	Vibratorstrøm: 2.0 – 4.0 VDC.
Tidsintervaller for slumre	Minker fra 9 til 2 min i 2 minutters trinn. Tidsavbrudd: 20 min
LCD-display	Type: Twisted Nematic (TN) LCD. Aktiveres av slumreknappen. Bakgrunnslysstyrke justerbar i 4 trinn.
Nattlys	Type: Elektroluminiserende. Tidsavbrudd: 1 t. (Ikke tilgjengelig for Classic)
Innganger	Telefoninngang, RJ- 11, analog, 26- 120 VRMS, 15- 100 Hz. Ekstern utløserinngang, 3.5 mm tle (innganger ikke tilgjengelig for BE 1350)
Knapper og kontroller	Adskilt trykk-roter-nummerskive for tidspunkt og alarm, slumreknapp, bryter for bakgrunnslysstyrke, 12/24 t-modusbryter, alarm av/på-bryter og velg blinkende lys/lyd-bryter (ikke tilgjengelig for Classic)
Radiofrekvens	868,3 MHz (Visit)
Radiodekning	< 250 m (Visit). Dekningen reduseres av vegger, store gjenstander eller andre radiosendere

## Tilleggsinformasjon

Bruk, transport og oppbevaring	Før informasjon, se <b>Additional information (EN)</b> .
Vedlikehold og rengjøring	Vedlikeholdsfri. Rengjøres med en tørr klut. Dette produktet er ikke tenkt for oppussing for gjenbruk. For å koble fra strømmen helt, må AC/DC-tilpasningspluggen kobles fra nettboksen. AC/DC-tilpasningspluggen må ikke blokkeres og må være lett tilgjengelig for tilsiktet bruk. Merkeinformasjon finner du i bunn av apparatet. Vennligst kontakt godkjent servicepersonell for lading av batterier. Skift ut batteriene med samme batteritype, Prestasjonsevne: 1.2 V 600 mAh NiMH. Bruk kun de spesifiserte oppladbare batteriene. Andre batterier kan skade enheten.
Sikkerhetsanvisninger	Hvis alarmklocken virker skadet eller ikke fungerer ordentlig, må du kontakte din forhandler for informasjon om garanti og service.
Garanti og service	

## Additional regulatory information

- a) This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the **bottom** of this equipment is a label that contains, among other information, a product identifier in the format **US:AAAEQ##TXXXX**. If requested, this number must be provided to the telephone company.
- b) An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., **RJ11C**) in the packaging with each piece of approved terminal equipment.
- c) A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
- d) The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. [For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format **US:AAAEQ##TXXXX**. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.]
- e) If this alarm clock equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
- f) The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- g) Should you experience trouble with this equipment, please contact your retailer for information about warranty and service. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- h) Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.
- i) Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
- j) **NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this alarm clock does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

**NOTICE:** According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.

### Applicable for Coin or Pay Phone Only

To comply with state tariffs, the telephone company must be given notification prior to connection for customer-owned coin or credit card phone. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.

## FCC compliance statement

For ACTA:  
REN: 0.1B  
US: 1PNRG01BBERXTE1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For a complete Declaration of Conformity please contact: info@bellman.com or call +46 31 68 28 20

## Statement for Industry Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to

the following two conditions:  
(1) This device may not cause interference.  
(2) This device must accept any interference, including interference that may cause undesired operation of the device.  
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :  
(1) L'appareil ne doit pas produire de brouillage;  
(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.  
IC: 6693A-BERXTE1 for Terminal Equipment

## Zusätzliche Information

**Zweckbestimmung des Produktes:** Uhr mit Wecker Funktion inkl. Vibrationskissen. **Zulässige Betriebsbedingungen:** Das Produkt darf nur Innen verwendet werden. **Reinigungshinweise:** Nur mit trockenem oder leicht feuchtem Tuch abwischen. **Wartungshinweise:** Akkus können durch autorisiertes Fachpersonal ausgetauscht werden. Bei Defekt des Blitzlichtes muss das Gerät eingeschickt werden. **Technische Daten:** Betrieb mit 7.5V Netzteil inkl. 4 x AAA NiMH-Akku (BE1350 Akku optional) als Überbrückung bei Stromausfall. **Eingänge:** Externer Trigger und Telefon (Nicht BE1350). **Ausgänge:** Vibrationskissen. **Hinweise zum Wiedereinsatz:** Das Produkt ist nicht für den Wiedereinsatz für eine andere Person vorgesehen.

BE1580: HMV 16.99.09.3021    BE1350: HMV 16.99.09.3023  
BE1370: HMV 16.99.09.3022



## **Manufacturer**

Bellman & Symfon Group AB  
Södra Långebergsgatan 30  
436 32 Askim Sweden  
Phone +46 31 68 28 20  
E-mail [info@bellman.com](mailto:info@bellman.com)  
**bellman.com**



Revision: BE1580\_067MAN013

Date of issue: 2021-04-20

TM and © 2021 Bellman & Symfon AB. All rights reserved.