

Visit portable receiver

BE1450/BE1452



Features

Powerful sound
Adjustable up to 93 dB

Clear signal identification
Uses LEDs and sound signatures

Long lasting power
Up to 3 years battery life

Bed shaker or speaker outlet
For nighttime/louder alerts

Easy setup
Works right out of the box

Keeps you in the loop.

The portable receiver from Bellman & Symfon is part of the Visit smart home system that helps you to keep tabs on your home. It alerts you with lights and sounds when the doorbell or telephone rings, when your baby needs you or if a fire should occur.

The portable receiver requires no installation and is very easy to use. It's completely wireless so you can bring it out on the porch or balcony and has a battery life of up to three years.

Clear and distinct alerts

The portable receiver is capable of producing a sound signal of up to 93 dB and features a large, ergonomic dial that makes it easy to adjust the volume to your liking. It uses colored lights and individual sound signatures to differentiate the Visit signals.

Additionally, you can connect a bed shaker and wake up to vibrations if something should happen while you are asleep.




Technical specifications




Dimensions and weight

Height	165 mm, 6.5"
Width	130 mm, 5.1"
Depth	36 mm, 1.4"
Weight	590 g, 20.8 oz. (incl. battery)

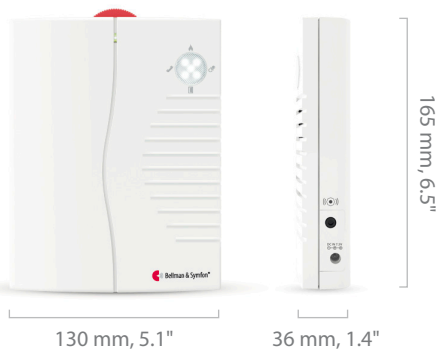

Buttons and controls

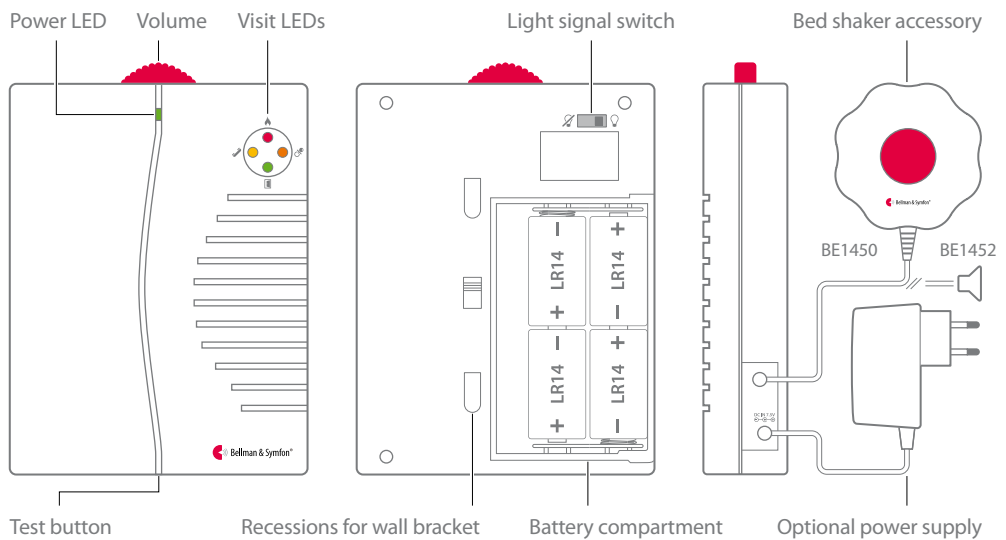

Features

- Adjustable sound signal
Max 93 dBA @ 1 m, frequency range: 500-1000 Hz
- Clear signal identification
Colored LEDs and individual sound signatures
- Long lasting power
Up to 3 years battery life
- Bed shaker outlet: 2.0 – 4.0 VDC (BE1450)
Speaker outlet: 10 kΩ, 0 – 4 V (BE1452)

Frequency and coverage

- Radio frequency: 315 MHz or 868.3 MHz, depending on the region
- Coverage: Up to 250 meters, depending on the building's characteristics

Environmental requirements

- Operating temperature: 59° to 95° F (15° to 35° C)
- Relative humidity: 5% to 95% (non condensing)

Power and battery

- Battery power
4 x 1.5V LR14 alkaline batteries
- Mains power
7.5 V DC / 1000 mA with optional power supply
- Power consumption
Active: 1000 mA, idle position: 0.1 mA
- Operating time
2 – 3 years with alkaline batteries

In the box

- BE1450 Portable receiver
- 4 x 1.5V LR14 batteries
- Wall bracket with screws and plugs

Regulatory requirements

- Complies with the following requirements:
CE, FCC, RoHS, RCM, WEEE, Der Grüne punkt



Visit indicators

The Visit LEDs normally indicates the following:

- Orange LED, pacifier symbol
The baby monitor is activated
- Green LED, door symbol
The door transmitter is activated
- Yellow LED, telephone symbol
The telephone transmitter is activated
- Red LED, fire symbol
The smoke alarm is activated

Accessories

- BE1270 Bed shaker
- BE9201/BE9202 Power supply unit (Europe/UK)

© 2016 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1450_001DAS002

bellman.com