

Visit smoke alarm

BE1550



Features

Ionization smoke alarm

Detects both smoke and flame

Battery supervision

Alerts also via the Visit receivers

Broadcast

Relays alarms to all units within range

Reliable radio link

Covers your entire home

Protect your home and family.

The smoke alarm from Bellman & Symfon is part of the Visit smart home system that helps you to keep tabs on your home. It discovers smoke and smoldering fire at an early stage and relays the alarm directly to your Visit receiver.

Watches out for you

If a fire starts, the smoke alarm instantly relays the signal to your Visit receiver that alerts you with sounds, flashes or vibrations

(depending on the receiver). Visit will give you an early warning, so you can get out of harm's way in time.

The smoke alarm uses a highly reliable radio link that covers your entire home. It is robust and features state-of-the-art battery supervision that automatically notifies you when the batteries run low. It is also features broadcast that relays the alarm to all Visit units within range.



Technical specifications




Dimensions and weight

- Diameter: **125 mm, 4.9"**
- Depth: **42 mm, 1.6"**
- Weight: **175 g, 6.1 oz. incl. battery**



Buttons and indicators

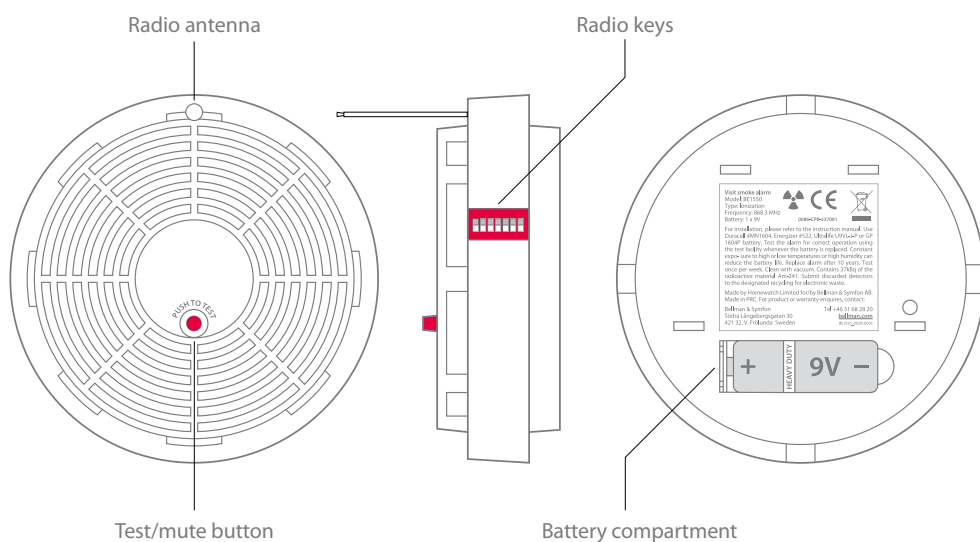

Features

- Sensor type
Ionization smoke detection
- Audible alarm
> 85 dB(A) @ 10' (3m)
- Broadcast mode On/Off
Transmits the alarm to all other Visit receivers within range, overriding the radio key settings
- Radio connection
Features a separate radio module mounted in the smoke detector
- Low battery warning
Relays the alarm signal to all Visit units within radio range.
- Activation
Via the built-in smoke detector
Via the test button

Regulatory requirements

- BE1550 complies with the following smoke alarm standards: EN14604 : 2005

Power and battery

- Power
Duracell MN1604 alkaline 9V replaceable battery
- Power consumption
Standby ~ 20µA
- Operation time:
Over 1 year

Number of radio keys

- 64 as standard. Up to 256 with optional software.

Environmental requirements

- For indoor use only
- Temperature range: 32° to 100° F (0° to 38° C)
- Humidity range: 15% to 95% R.H.
(non-condensing)

Frequency and coverage

- Radio frequency: 868.3 MHz
- Coverage: Up to 250 m clear line of sight.
Radio coverage depends on the building's characteristics and local radio conditions.

In the box

- BE1550 Smoke alarm
- 1 x 9V battery
- Mounting plate
- Screws and plugs
- User manual and Quick start guide



Maintenance and cleaning

- Vacuum your smoke alarm regularly (and always when the battery is replaced) with the soft brush and wipe the unit with a slightly damp cloth.
- Warning: Do not paint over the smoke alarm.

© 2016 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1550_001DAS002

bellman.com