

Magnetic switch

BE9023



Features

Flexible

Works for doors and windows

Easy to set up

Pre-mounted adhesive tape

Visit compatible

Connects to the Visit system


Monitors your door and window.

The magnetic switch from Bellman & Symfon is specially designed for the Visit smart home system and alerts you when a door or window is opened.

Just mount the magnetic switch on the door or window frame and connect it to the Visit telephone transmitter. When the magnets are separated, the transmitter signals your Visit receiver that alerts you with sound, flashes or vibrations (depending on the receiver).

Technical specifications

- Dimensions 25 x 62 x 13 mm, 1" x 2.5" x 0.5"
- Weight 25 g, 0.9 oz.
- Connector 3.5 mm mono jack plug
- Cable length 0.5 m, 1.6'
- Contact breaker:
 - Open > 1 cm, 0.4" from the magnet
 - Closed < 2 cm, 0.8" from the magnet
- Colour White
- For indoor use only

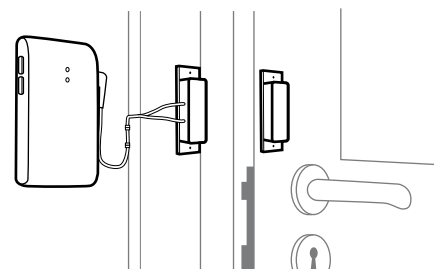

© 2016, Bellman & Symfon AB. All rights reserved.
Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE9023_001DAS002

bellman.com