

Visit portable receiver

BE1033



 Bellman & Symfon®



Features

Powerful sound
Adjustable up to 93 dB

Clear signal identification
Uses individual sound signatures

Long lasting power
More than 1 year battery life

Bed shaker outlet
For nighttime alerts

Easy setup
Works right out of the box

Keeps you in the loop.

The portable receiver from Bellman & Symfon is part of the Visit smart home system that helps you to keep tabs on your home. It alerts you with lights and sounds when the doorbell or telephone rings, when your baby needs you or if a fire should occur.

It requires no installation procedures and is very easy to use. It's completely wireless so you can bring it out in the garden or balcony and has a battery life of up to three years.

Clear and distinct alerts

The portable receiver is capable of producing a sound signal of up to 93 dB and features a large, ergonomic dial that makes it easy to adjust the volume to your liking. It uses individual sound signatures to differentiate the Visit signals.

Additionally, you can connect a bed shaker and wake up to vibrations if something should happen while you are asleep.




Technical specifications




Dimensions and weight

Height	165 mm, 6.5"
Width	130 mm, 5.1"
Depth	36 mm, 1.4"
Weight	590 g, 20.8 oz. (incl. battery)

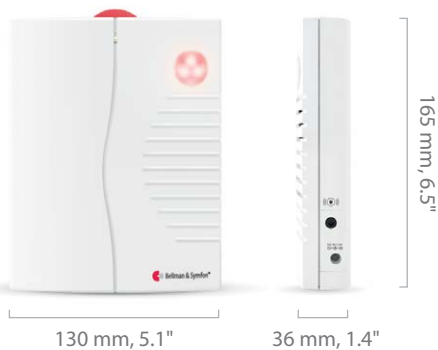

Buttons and controls

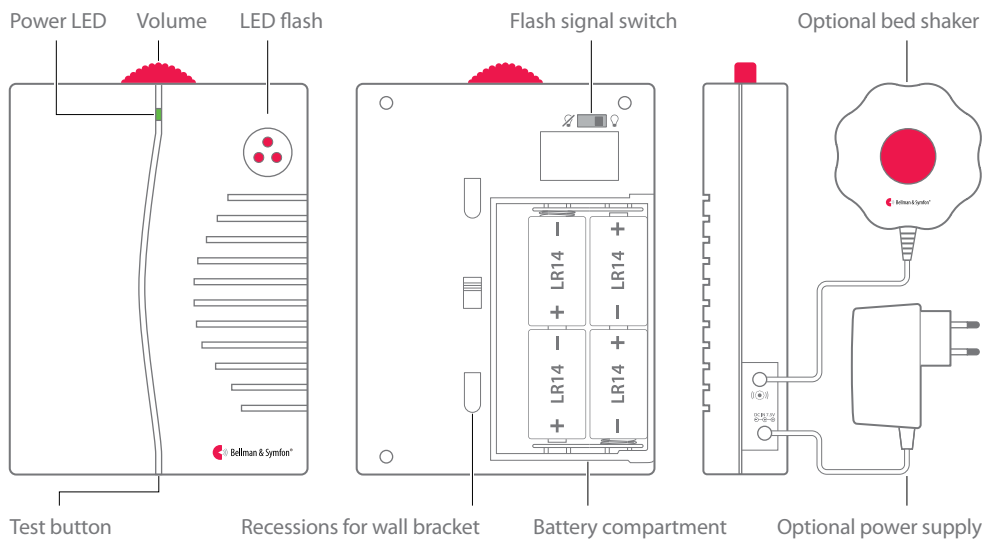

Features

- Adjustable sound signal
Max 93 dBA @ 1 m, frequency range: 500-1000 Hz
- Clear signal identification
Uses individual sound signatures
- Long lasting power
More than 1 year battery life
- Bed shaker outlet
For nighttime alerts
- Easy setup
Works right out of the box

Connections

- Outlet for power supply and bed shaker
- Vibrator power: 2.0 – 4.0 VDC

Environmental requirements

- Operating temperature: 32° to 95° F (0° to 35° C)
- Relative humidity: 15% to 90% (non condensing)

Power and battery

- Battery power
4 x 1.5V LR14 alkaline batteries
- Mains power
7.5 V DC / 1500 mA with optional power supply
- Power consumption
Active: 500 mA, idle position: 0.8 mA
- Operating time
More than 1 year with alkaline batteries

Accessories

- BE1270 Bed shaker
- Power supply unit for North America, Australia and New Zealand

Regulatory requirements

- Complies with the following requirements:
FCC, RoHS, RCM, WEEE, Der Grüne punkt



In the box

- BE1033 Portable receiver
- 4 x 1.5V LR14 batteries
- Wall bracket
- Screws and plugs
- User manual



Frequency and coverage

- Radio frequency: 433.92 MHz
- Coverage:
30 – 80 m (98 - 260 ft), depending on the building's characteristics and the combination of transmitters and receivers.

© 2024 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1033_001DAS1.0

bellman.com