


Visit Pager Charger

BE1260

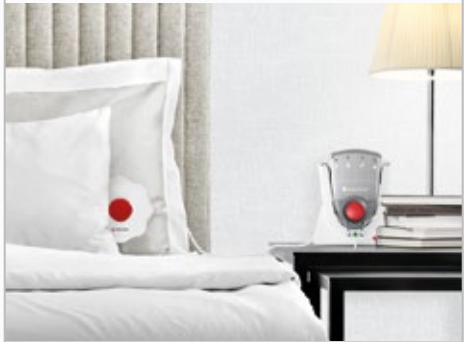

Features

Night-time alerts
Alerts you with vibrations

Bed shaker outlets
Supports two bed shakers

Battery backup
Works even during power loss



Charger for the Visit Pager.

The Visit Pager Charger from Bellman & Symfon is specially designed for the Visit System and is used to recharge the Visit Pager battery.

The Pager alerts you even during charging, just connect a bed shaker to the charger to wake up to vibrations if a Visit transmitter is activated while you are resting. The charger features backup batteries and remains fully functional during power loss, so you can get a peaceful sleep.

Technical specifications

- Dimensions 78 x 88 x 43 mm, 3.1" x 3.5" x 1.7"
- Weight, incl batteries and power adapter 200 g, 7 oz.
- Mains power 7.5 VDC / 1500 mA
- Backup battery Internal NiMH batteries
- Vibrator power 2.0 - 4.0 VDC
- Accessories:
 - BE1470 Visit Pager receiver
 - BE1270 Bed ShakerConnect up to two
- For indoor use only

Approvals

This product complies with applicable FCC and ISCED Canada regulations.
本機器は日本の電波法に適合しています。



© 2025 , Bellman & Symfon AB. All rights reserved.
Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1260_001DSH1.0_EN bellman.com