
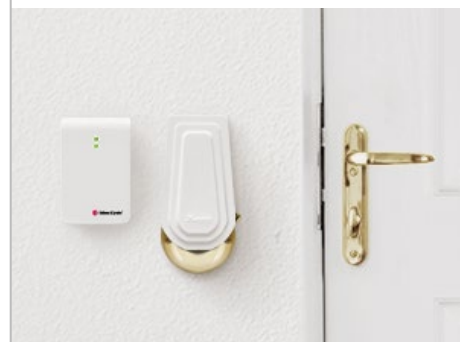


# Visit Door Transmitter

## BE1411

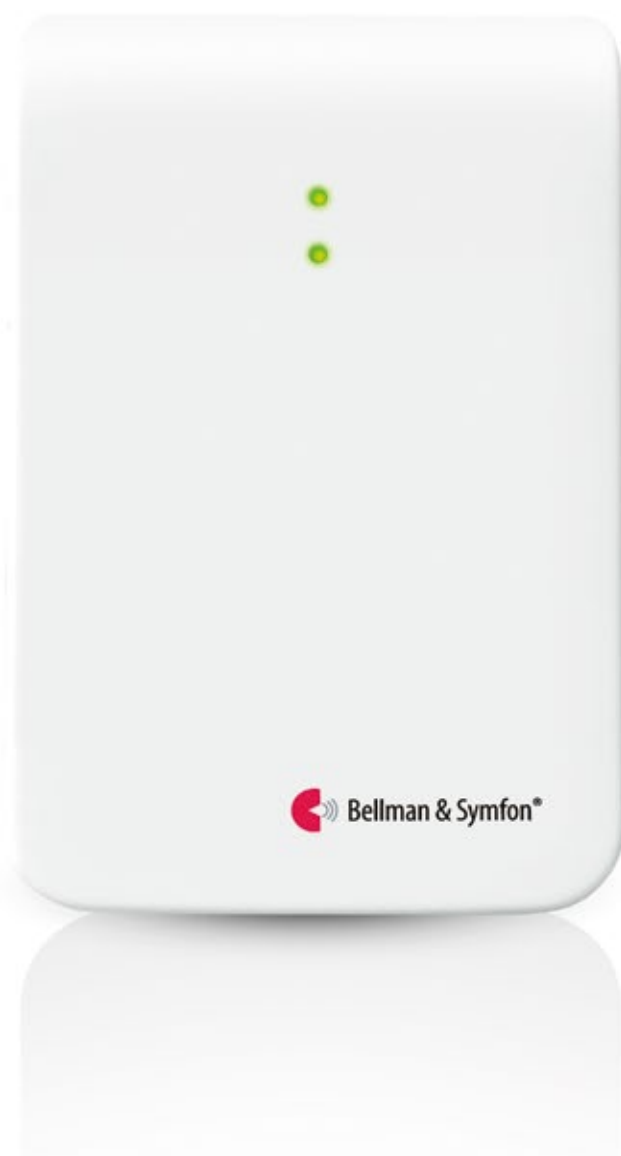

### Features

#### Flexible

Detects the doorbell & intercom

#### Reliable detection

Dual microphone technology

#### Programmable

Teach it to recognize any sound

#### Long lasting power

Up to 10 years of battery life

#### Secure radio link

Up to 120 m operating range

## Know when your guests arrive

The Door Transmitter from Bellman & Symfon is part of the Visit system that helps you to keep tabs on your home.

It recognizes the majority of doorbells and intercoms by default and can be programmed to identify virtually any doorbell sound.

### How it works

When the Door Transmitter is activated, it signals the Visit receiver that notifies you with sound, flashes or vibrations (depending on the receiver).

### Multiple activation

The Door Transmitter can be activated by:

- The internal microphone
- The built-in electromagnetic detector
- The external microphone accessory
- A galvanic connection to your existing doorbell

The Door Transmitter uses dual microphone technology for reliable detection and a robust radio link that covers your entire home. It is very easy to set up, virtually maintenance free and operates for years on standard batteries.



# Technical specifications




## Size and weight

Height: **100 mm, 4.0"**  
Width: **65 mm, 2.6"**  
Depth: **27 mm, 1.1"**  
Weight: **120 g, 4.2 oz (incl. batteries)**



## Buttons and connectors

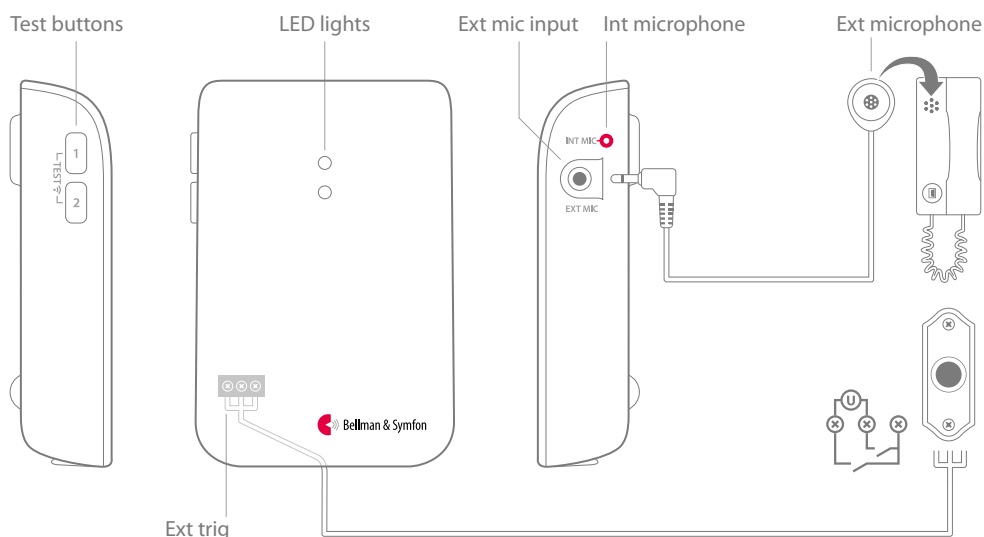

## Inputs/outputs

- External microphone input
- External trigger input

## Activation

- The test buttons and the internal microphone
- The built-in electromagnetic detector
- The external microphone accessory
- The existing doorbell connected to the ext. trig

## Frequency and coverage

- Radio frequency: 315 MHz, 433.92 MHz
- Coverage by region:  
315 MHz: 30 – 80 m, (98 – 262 ft)  
433 MHz: 70 – 120 m, (230 – 394 ft)  
Depending on the characteristics of the building.

## Compliance

This product complies with applicable FCC and ISED Canada regulations.

本機器は日本の電波法に適合しています。

## Power and battery

- Power supply  
Battery power 2×1.5 V AA Lithium or Alkaline
- Power consumption  
Active < 70 mA, idle position < 15 µA
- Operation time  
Alkaline ~ 5 years, Lithium ~ 10 years

## Number of radio keys

- 64 as standard. Up to 256 with optional software.

## Maintenance and cleaning

- Maintenance free. Clean with a dry cloth.
- Do not use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.
- Not reusable.

## Environmental requirements

- For indoor use only
- Temperature: 0 to 35° C, 32 to 95° F
- Relative humidity: 15% -90% (non condensing)

## In the box

- BE1411 Visit Door Transmitter
- 2×1.5V AA Alkaline batteries
- Velcro for wall mounting
- Screw and plug



## Accessories

- BE9199 External microphone 2.5 m

© 2025 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1411\_001DSH1.0-EN

[bellman.com](https://bellman.com)