


# Visit baby monitor

## BE1491

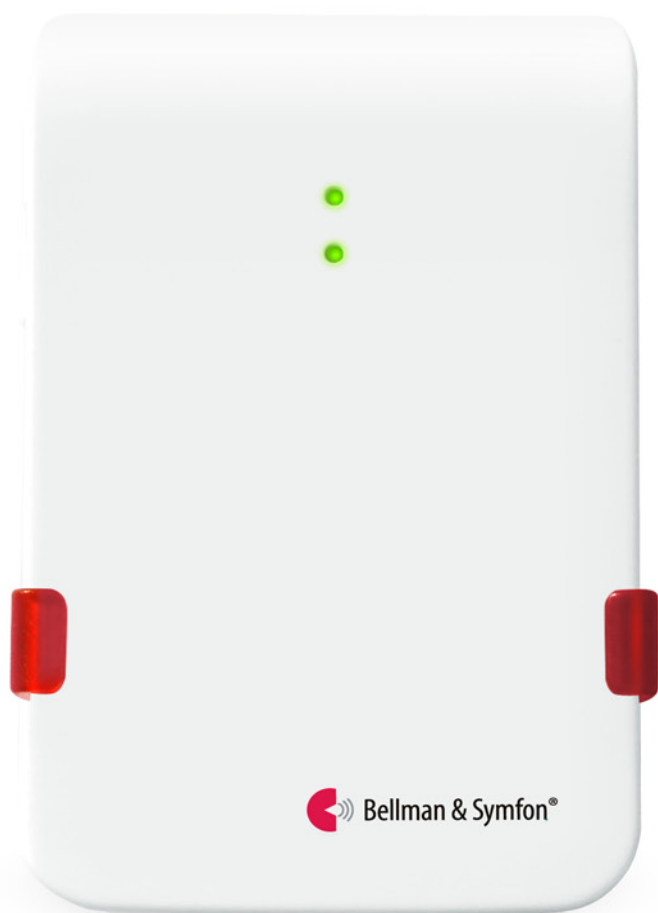

### Features

**Reliable transmission**  
Up to 250 m operating range

**Flexible**  
Adjustable sensitivity and delay

**Customizable notification**  
Use a unique signal for each child

**Optional contact mat**  
Know if your child leaves the bed

**Easy to use**  
No complicated menus

## Be there for your baby

Caring for your baby's health and safety is one of the most important things you do as a parent. Bellman & Symfon offers a fully secure baby monitoring solution for parents with hearing loss, so you are always close to your baby. The Visit baby monitor will notify you as soon as your baby needs you, even if you are asleep or a couple of rooms away.

### How it works

When the Visit baby monitor is activated, it signals your Visit receiver that notifies you with sound, flashes or vibrations (depending on the receiver).

### Secure and reliable

Visit uses a secure radio link that covers your entire home, so you always know that you are connected.

### Adjustable sensitivity and delay

You can adjust the sensitivity and delay of the baby monitor so it's not activated when your child moves in her sleep.

### Customizable notification

If you have more than one child you can choose different signals so you know who needs your attention.



# Technical specifications




## Size and weight

- Height: **4.0", 100 mm**  
Width: **2.6", 65 mm**  
Depth: **1.1", 27 mm**  
Weight: **4.2 oz, 120 g incl. batteries**



## Buttons and connectors

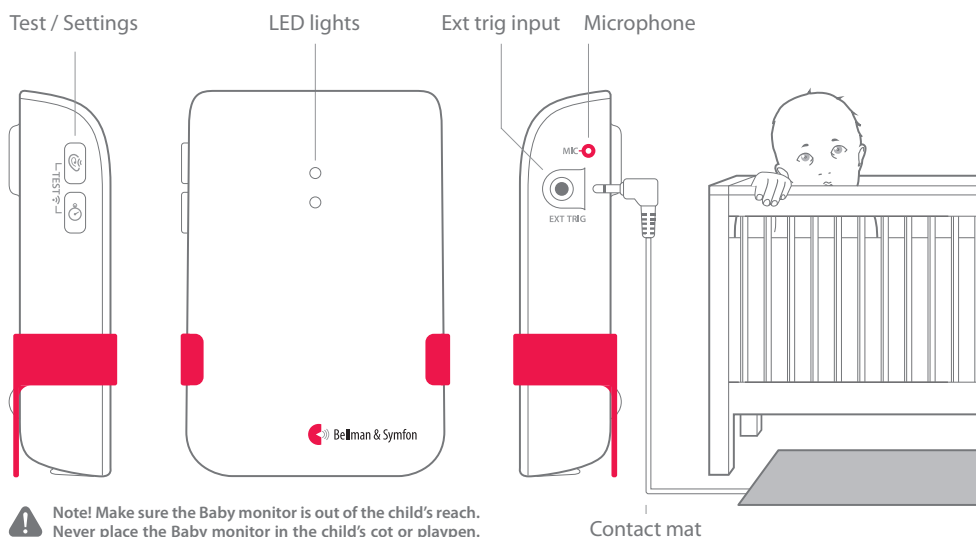

## Inputs/outputs

- 3.5 mm external trigger input

## Activation

- The test buttons and the internal microphone
- The contact mat accessory

## Settings

- Sensitivity: High, Medium, Low
- Delay: 30 sec, 10 sec, 1 sec

## Frequency and coverage

- Radio frequency: 315 MHz, 433.92 MHz or 868.3 MHz, depending on the region
- Coverage: 50 – 250 m, depending on the radio frequency and building's characteristics

## Environmental requirements

- For indoor use only.
- Temperature: 59° to 95° F (15°-35° C)
- Relative humidity: 5% -95% (non condensing)

## Power and battery

- Power supply  
Battery power 2 x 1.5 V AA lithium or alkaline
- Power consumption  
Active < 70 mA, idle position < 400 µA
- Operation time  
Alkaline ~ 6 months, lithium ~ 1 year

## Number of radio keys

- 64 as standard. Up to 256 with optional software.

## Maintenance and cleaning

- Maintenance free. Clean with a dry cloth.
- Do not use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.
- Not reusable.

## Regulatory requirements

- Complies with the following requirements:  
WEEE, Der Grüne punkt, CE, RoHS, C-tick, A-tick



## In the box

- BE1491 Visit baby monitor
- Table stand
- 2 x 1.5V AA alkaline batteries
- Screw and plug
- User manual



## Accessories

The following accessories are available:

- BE9024 Contact mat

© and TM 2015, Bellman & Symfon AB

Bellman and Bellman & Symfon are registered trademarks owned by Bellman & Symfon AB, all rights reserved. All product designs are patented. This leaflet is subject to change without prior notice.

BE1431\_001DAS001

[bellman.com](http://bellman.com)