

Maxi Pro TV streamer

BE2022



Features

Bluetooth powered

Streams the sound using Qualcomm® aptX™ LL technology

Multiple ports

Connects to the vast majority of modern television sets



Listen at your own volume.

The Maxi Pro TV streamer enables you to hear the television at a volume that suits you, without affecting the volume for anyone else in the room. It streams the sound in full HD-stereo via Bluetooth to your Maxi Pro personal amplifier.

The Maxi Pro TV streamer uses the latest Qualcomm® aptX™ low latency technology which results in optimum time synchronization when playing back audio, rendering crisp and clear sound without any lip sync issues. The TV streamer features both analogue and digital input and connects to the vast majority of modern television sets.



Technical specifications




Dimensions and weight


Height: 24 mm, 0.9" Depth: 48 mm, 1.9"
Width: 88 mm, 3.5" Weight: 70 g, 2.5 oz.



Buttons and controls

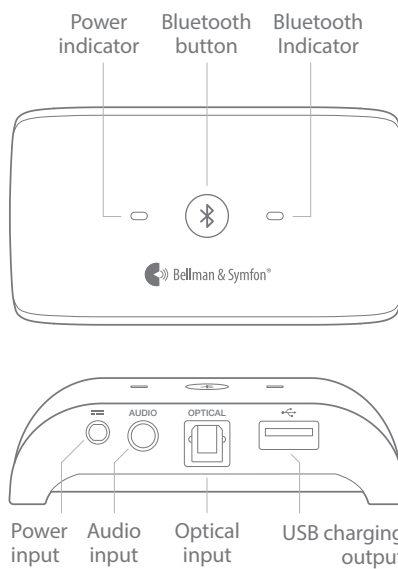

Mini-stereo cable Mini-stereo-to-RCA adapter

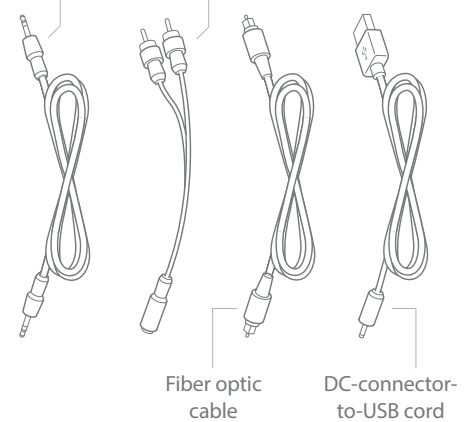

Features

- Uses Qualcomm® aptX™ low latency streaming technology which results in optimum time synchronization when playing back audio, rendering crisp and clear sound without any lip sync issues.
- Multiple ports
Features both analog and digital input and connects to the vast majority of television sets.

Connections

- Audio input: 3.5 mm mini-stereo
- Audio input sensitivity @ max 2Vrms: +6 dBV
- Optical input: 44.1KHz, 48KHz
- Optical input sensitivity: 0 dBFS
- Charger input: 2.5 mm connector
Output: DC 5V, 1.0A
- Charging output: USB type A

Maintenance and cleaning

- To clean the product, unplug the power cord and all cables. Then use a soft, lint-free cloth. Avoid getting moisture in openings.
- Don't use window- or household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.

Power

- Power consumption: 31 mA

Frequency and coverage

- Bluetooth frequency
2402 – 2480 MHz
- Coverage
Up to 25 m, 27.5 yd, free field
- Connectivity
Qualcomm® aptX™ LL

Environmental requirements

- Operating temperature
0° – 35 °C, 32° – 95° F
- Relative humidity
5% – 90% (non condensing)

Regulatory requirements

- Complies with the following requirements:



FCC ID: 2APAKBE2022 IC: 6693A-BE2022 R 204-720514

In the box

- BE2022 Maxi Pro TV streamer
- User manual
- Mini-stereo cable
- Mini-stereo-to-RCA adapter
- Fiber optic cable
- DC-connector-to-USB cord



Accessories

- BE9228 Fiber optic cable, white
- BE9123 Mini-stereo-to-RCA cable kit, white
- BE9254 Single DC-to-USB charger cord, white
- BE9148 Dual DC-to-USB charger cord, black
- BE9273 Universal power adapter, white
- BE9262 Universal power adapter, black

© and TM 2019, Bellman & Symfon AB

Bellman and Bellman & Symfon are registered trademarks owned by Bellman & Symfon AB, all rights reserved. All product designs are patented. This leaflet is subject to change without prior notice.

BE2022_035DSH002

bellman.com