Visit wrist reciever

BE8102







Features

Discreet vibrations

Silent and non-intrusive

Clear signal identification

Uses LEDs and vibration patterns

Comfortable to wear

Materials that is kind to the skin

Easy to customize

Replaceable wrist band

Charger included

Equipped with a bed shaker jack

By your side, day and night.


The wrist receiver from Bellman & Symfon is part of the Visit smart home system that helps you to keep tabs on your home. It alerts you with gentle vibrations when the doorbell or telephone rings, when your baby needs you or if a fire should occur.

The receiver is equipped with a silicone wristband that is kind to the skin and can be worn like a regular wrist watch. It features

clear icons that light up in different colors to make it easy to identify the alert. Use it in and around the house to know whenever something happens that needs your attention.

The accompanying charger features battery backup and an outlet for a bed shaker. Just place it under your pillow or mattress to be alerted with vibrations if something happens during the night.



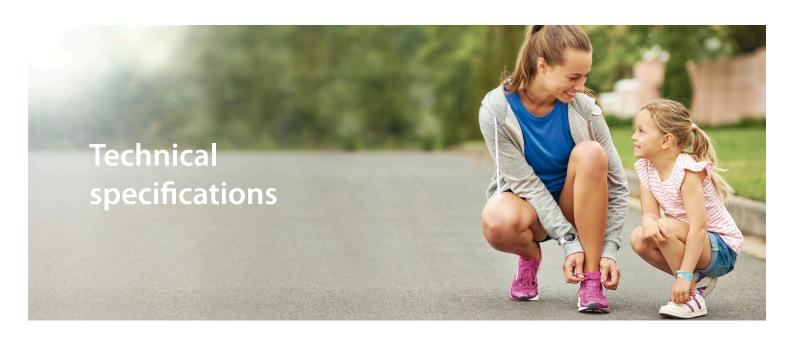



Dimensions and weight

Receiver Charger Height 49 mm, 1.9" 100 mm, 3.9" Width 38 mm, 1.5" 95 mm, 3.7" 12 mm, 0.5" 117 mm, 4.6" Depth Weight 27 g, 0.9 oz. 185 g, 6.5 oz.



Buttons and controls

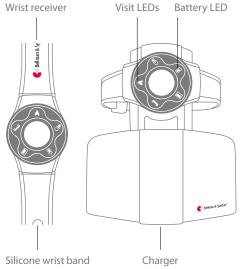

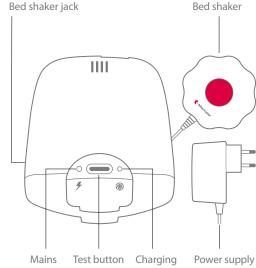

Features

- Discreet alerts Produces silent and non-intrusive vibrations
- Clear signal identification Uses colored LEDS and vibration patterns
- Comfortable to wear Rubber wrist band that is kind to the skin
- Charger included Equipped with a bed shaker jack

Frequency and coverage

- Radio frequency: 315 MHz, 433.92 MHz or 868.3 MHz, depending on the region
- Coverage: 50 250 m, depending on the radio frequency and building's characteristics

Environmental requirements

- Operating temperature: 15° to 35° C 59° to 95° F
- Relative humidity: 5% to 95% (non condensing)

Power and battery

- Mains power 7.5 V DC/1500 mA with power supply unit
- Battery power Receiver: 1 x 1.2 V V40H rechargeable battery Charger: 4 x 1.2 V NiMH rechargeable batteries
- Power consumption Receiver: Active: 100 mA, Idle position: 3 mA Charger: Active 650 mA, Idle position 70 mA
- Operating and charging time Receiver: ~30 h, Charging time: ~8 h Charger: Backup battery charging time: ~24 h

In the box

- BF1560 Visit wrist receiver with extra wrist band
- BE1570 Charger with power supply

Regulatory requirements

Complies with the following requirements: CE, FCC, RoHS, RCM, WEEE, Der Grüne punkt











Visit indicators

The Visit LEDs normally indicates the following:

- Orange LED, pacifier symbol The baby monitor is activated
- Green LED, door symbol The door transmitter is activated
- Yellow LED, telephone symbol The telephone transmitter is activated
- Red LED, fire symbol The smoke alarm is activated

Accessories

- BE1270 Bed shaker
- BE9086 External trigger cable

© 2016 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.