

Visit baby monitor

BE1491



 Bellman & Symfon®



Features

Reliable transmission

Up to 250 m operating range

Flexible

Adjustable sensitivity and delay

Customizable notification

Use a unique signal for each child

Optional contact mat

Know if your child leaves the bed

Easy to use

No complicated menus

Be there for your baby.

Caring for your baby's health and safety is one of the most important things you do as a parent. Bellman & Symfon offers a fully secure baby monitoring solution for parents with hearing loss, so you are always close to your baby. The Visit baby monitor will notify you as soon as your baby needs you, even if you are asleep or a couple of rooms away.

How it works

When the baby monitor is activated, it signals your Visit receiver that notifies you with sound, flashes or vibrations (depending on the receiver).

Secure and reliable

Visit uses a secure radio link that covers your entire home, so you always know that you are connected.

Adjustable sensitivity and delay

You can adjust the sensitivity and delay of the baby monitor so it's not activated when your child moves in her sleep.

Customizable notification

If you have more than one child you can choose different signals so you know who needs your attention.



Technical specifications




Size and weight

- Height: **100 mm, 4.0"**
Width: **65 mm, 2.6"**
Depth: **27 mm, 1.1"**
Weight: **120 g, 4.2 oz (incl. batteries)**



Buttons and connectors

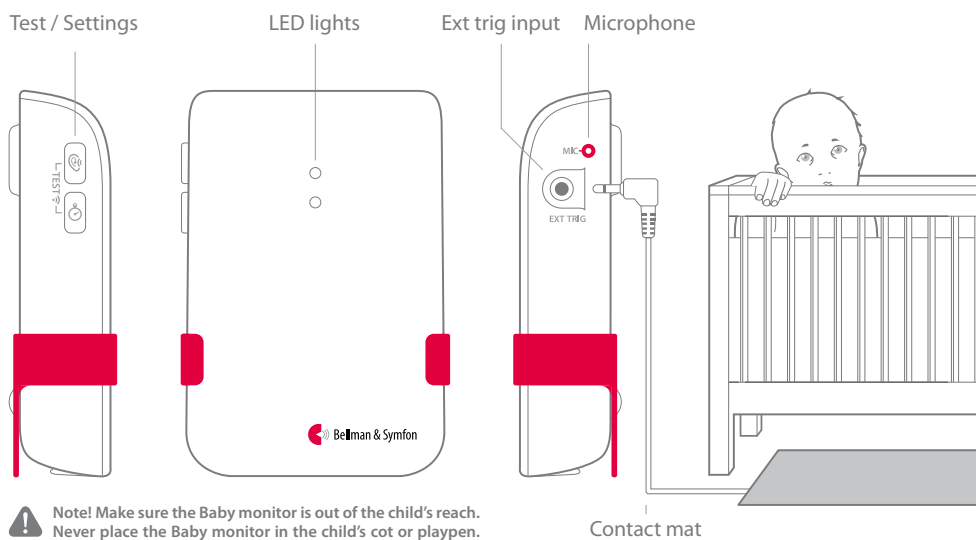

! Note! Make sure the Baby monitor is out of the child's reach. Never place the Baby monitor in the child's cot or playpen.

Inputs/outputs

- 3.5 mm external trigger input

Activation

- The test buttons and the internal microphone
- The contact mat accessory

Settings

- Sensitivity: High, Medium, Low
- Delay: 30 sec, 10 sec, 1 sec

Frequency and coverage

- Radio frequency: 315 MHz, 433.92 MHz or 868.3 MHz, depending on the region
- Coverage: 50 – 250 m, depending on the radio frequency and building's characteristics

Environmental requirements

- For indoor use only.
- Temperature: 15°-35° C, 59° to 95° F
- Relative humidity: 5% -95% (non condensing)

Power and battery

- Power supply
Battery power 2 x 1.5 V AA lithium or alkaline
- Power consumption
Active < 70 mA, idle position < 400 µA
- Operation time
Alkaline ~ 6 months, lithium ~ 1 year

Number of radio keys

- 64 as standard. Up to 256 with optional software.

Maintenance and cleaning

- Maintenance free. Clean with a dry cloth.
- Do not use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.
- Not reusable.

Regulatory requirements

- Complies with the following requirements:
CE, FCC, RoHS, RCM, WEEE, Der Grüne punkt



In the box

- BE1491 Visit baby monitor
- Table stand
- 2 x 1.5V AA alkaline batteries
- Screw and plug
- User manual



Accessories

The following accessories are available:

- BE9024 Contact mat

© 2016 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1491_001DAS002

bellman.com