

# Visit smoke alarm

BE1551



## Features

### Ionization smoke alarm

Detects both smoke and flames

### Battery supervision

Also alerts via the Visit receivers

### Broadcast function

Relays alarms to all receivers within range

### Reliable radio link

Up to 200 m operating range

## Protect your home and family.

The smoke alarm from Bellman & Symfon is part of the Visit smart home system that helps you to keep tabs on your home. It discovers smoke and fast flaming fires at an early stage and relays the alarm directly to your Visit receiver.

### Watches out for you

If a fire starts, the smoke alarm instantly relays the signal to your Visit receiver that alerts you with sounds, flashes or vibrations (depending on

the receiver). Visit will give you an early warning, so you can get out of harm's way in time.

The smoke alarm uses a highly reliable radio link that covers your entire home. It is robust and features state-of-the-art battery supervision that automatically notifies you when the batteries run low. It is also features broadcast that relays the alarm to all Visit receivers within range.



# Technical specifications




## Size and weight

- Height: **118 mm** , 4.6"  
Width: **140 mm** , 5.5"  
Depth: **42 mm** , 1.6"  
Weight: **200 g** , 7 oz. incl. battery



## Overview

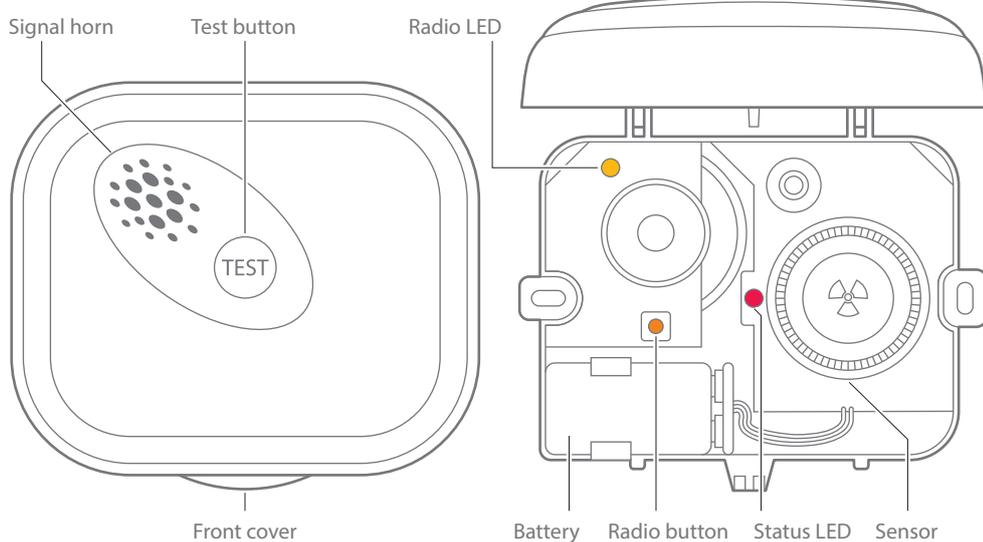

## Features

- Sensor type  
Ionization smoke detection
- Smoke sensitivity  
Meets requirements for BS EN 14604:2005
- Audible alarm  
> 85 dB(A) @ 3m, 2,6 kHz
- Radio  
Separate radio module mounted inside the unit
- Battery supervision  
Audible low battery warning and relays the warning to all Visit receivers in the system.
- Broadcast function  
Relays the alarm to all Visit receivers within range.

## Number of radio keys

- 64

## Regulatory requirements

- Complies with the following smoke alarm standards: R&TTE Directive 199/5/EC (RF Performance EN300220-3, EMC to EMC 301489-3, BS EN14604:2005

## Power and battery

- Battery type  
Duracell MN1604 9V alkaline battery
- Power consumption  
Idle position < 15µA
- Operation time  
Minimum 3 years

## Environment

- For indoor use only
- Temperature range: 4° to 40° C (39° to 104° F)
- Humidity range: 15% to 95% RH (non-condensing)

## Frequency and range

- Radio frequency: 868.30 MHz
- Coverage: Up to 200 m clear line of sight.  
Radio coverage is depending on the building's characteristics and local radio conditions.

## In the box

- BE1551 Visit smoke alarm
- 1 x 9V alkaline battery
- 2 x screws and plugs
- User manual



## Maintenance and cleaning

- Vacuum your smoke alarm regularly (and always when the battery is replaced) with the soft brush and wipe the unit with a slightly damp cloth.
- Warning: Do not paint over the smoke alarm.

© 2018, Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1551\_018DAS002\_EN

[bellman.com](http://bellman.com)