

Visit smoke alarm

BE1287



Features

Sensor type
Optical sensor

Battery supervision
Warns if the battery runs low

Toast mode
For areas with cooking fumes

Reliable radio link
Covers your entire home

Protect your home and family.

The smoke alarm from Bellman & Symfon is part of the Visit smart home system that helps you to keep tabs on your home. It discovers smoke and smoldering fire at an early stage and relays the alarm directly to your Visit receiver.

Watches out for you

If a fire starts, the smoke alarm instantly relays the signal to your Visit receiver that alerts you with sounds, flashes or vibrations (depending

on the receiver). Visit will give you an early warning, so you can get out of harm's way in time.

The smoke alarm uses a radio link that covers your entire home. It is robust and features state-of-the-art battery supervision that automatically notifies you when the batteries run low. It is also equipped with toast mode to avoid false alarms while you are cooking.



Technical specifications




Dimensions and weight

- Height: **105 mm, 4.13"**
Width: **105 mm, 4.13"**
Depth: **36 mm, 1.42"**
Weight: **110 g, 3.9 oz. (incl. battery)**




Buttons and controls

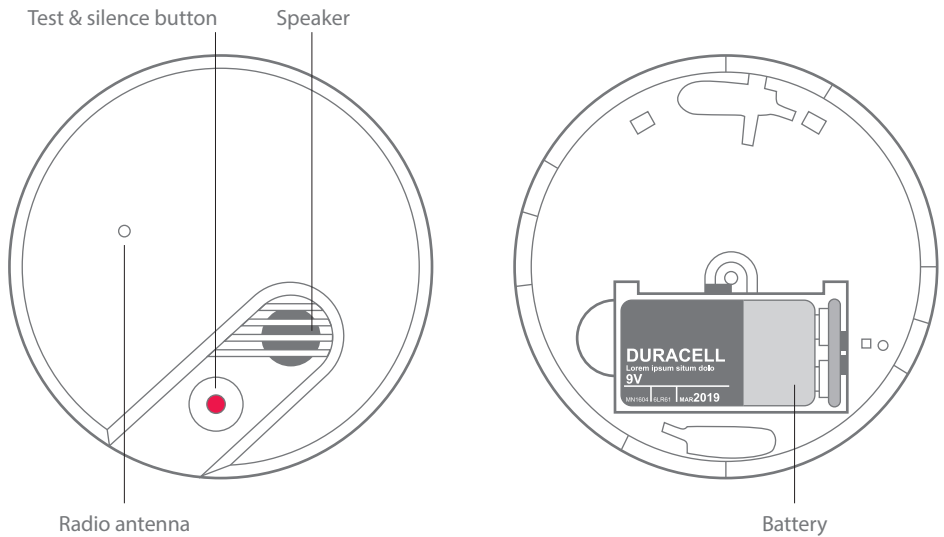

Features

- Sensor type
Photoelectric Infrared sensor
- Audible alarm
85 dB(A) @ 3m (9,8')
- Activation
Via test and silence button
Via the smoke detector's photoelectric chamber
- Antenna direction
The antenna should be straight and pointed directly down to achieve the best coverage between the Visit smoke alarms and Visit receivers.

Regulatory requirements

 BE1287 complies with the following smoke alarm standard: AS3786



Australian Standard
AS3786 LIC 1602
SAI Global

Power and battery

- Power supply
9V battery: Duracell MN1604, Energizer 522 (alkaline) or Ultralife U9VL-J (lithium)
- Power consumption
Active: 40 mA max, Idle position: < 8 μ A
- Operation time
With Duracell MN1604 or Energizer 522:
~ 3 years
With Ultralife U9VL-J lithium battery:
~ 10 years

Environmental requirements

- For indoor use only
- Temperature range: 0° C (32° F) to 45° C (113° F)
Humidity range:
15% to 90% (non-condensing)

Frequency and coverage

- Radio frequency: 433.92 MHz
- Coverage: ~ 87 yd, 80 m clear line of sight.
Radio coverage depends on the building's characteristics and local radio conditions.

In the box

- BE1287 Visit smoke alarm
- 1 x 9V battery
- Mounting plate
- Screws and plugs
- User manual



Maintenance and cleaning

- Vacuum your smoke alarm regularly (and always when the battery is replaced) with the soft brush and wipe the unit with a slightly damp cloth.
- Warning: Do not paint over the smoke alarm.

© 2016 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1287_001DAS001-SAI

bellman.com