

Visit smoke alarm

BE1289



Features

Sensor type
Photoelectric sensor

Sealed battery
Lasts for 10 years

Silence mode
For areas with cooking fumes

Reliable radio link
Covers your entire home

Interconnection
Support for up to 40 devices

Protect your home and family.

The smoke alarm from Bellman & Symfon is part of the Visit smart home system that helps you to secure your home. It discovers smoke and smoldering fire at an early stage and relays the alarm directly to your Visit receiver.

Watches out for you

If a fire starts, the smoke alarm instantly relays the signal to your Visit receiver that alerts you with sounds, flashes or vibrations (depending on

the receiver). Visit will give you an early warning, so you can get out of harm's way in time.

The smoke alarm uses a highly reliable radio link that covers your entire home. It is robust and features interconnection that supports up to 40 additional smoke alarms.

The smoke alarm is equipped with a silence function to mute false alarms while you are cooking.



Technical specifications





Dimensions and weight

- Height: **114 mm, 4.48"**
Width: **114 mm, 4.48"**
Depth: **40 mm, 1.57"**
Weight: **126 g, 4.4 oz. (incl. battery)**



Buttons and controls

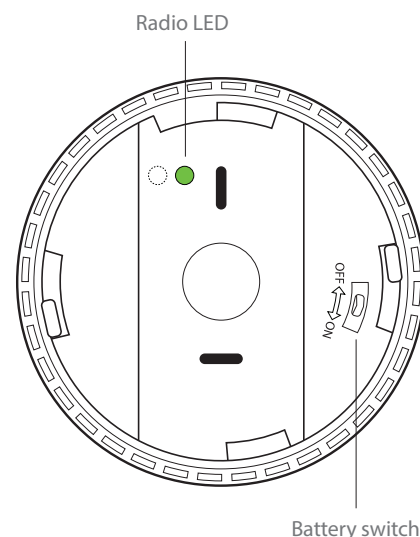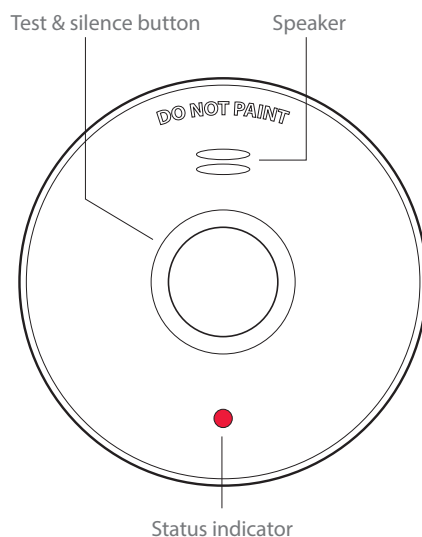

Features

- Sensor type
Photoelectric Infrared sensor
- Audible alarm
85 dB(A) @ 3m (9,8')
- Activation
Via test/silence button
Via the smoke detector's photoelectric chamber
- Interconnect function
Wireless interconnection function for up to 40 devices
- Fixed radio channel
Transmits the alarm to all other Visit receivers within range, no matter what radio key the Visit receivers are set to.
- Long lasting power
Offers 10 years battery life.

Regulatory requirements

- BE1289 complies with the following smoke alarm standard: AS3786: 2014

Power and battery

- Battery
Equipped with a built-in powered for life nonreplaceable lithium battery.
- Power consumption
Active: 70 mA max, Idle position: < 11 µA
- Battery life
10 years. Matches the product lifetime.

Environmental requirements

- For indoor use only
- Operating temperature: 0° C (32° F) to 45° C (113° F)
Humidity range:
15% to 93% (non-condensing)

Frequency and coverage

- Radio frequency: 433.42MHz and 433.92MHz.
- Coverage: ~ 66 yd, 100 m clear line of sight.
Radio coverage depends on the building's characteristics and local radio conditions.

In the box

- BE1289 Visit smoke alarm
- Mounting plate
- Screws and plugs
- User manual



Maintenance and cleaning

- Vacuum your smoke alarm regularly with the soft brush and wipe the unit with a slightly damp cloth.
- Warning: Do not paint over the smoke alarm.

© 2020 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1289_013DSH002

bellman.com