


Visit wrist receiver

Buttons and controls

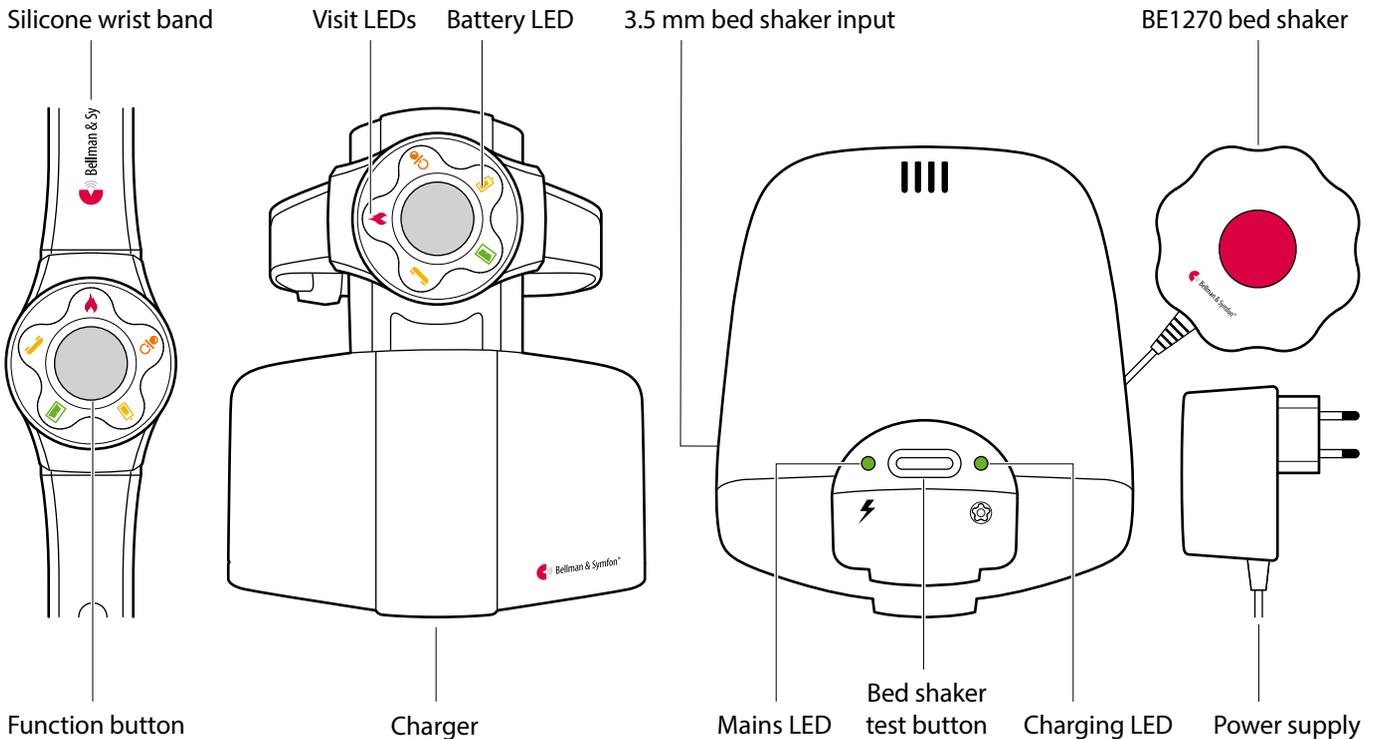

Technical specifications

In the box

- BE1560 Visit wrist receiver
- BE1570 Charger
- Elastic wrist band
- Power supply

Power and battery

- Mains power: 7.5 V DC/1500 mA
- Power consumption
Receiver: Active: 100 mA, Idle: 3 mA
Charger: Active: 650 mA, Idle: 70 mA
- Battery power
Receiver: 1 × 1.2 V V40H rechargeable
Charger: 4 × 1.2 V NiMH rechargeable
- Operating and charging time
Receiver: ~30 h, Charging time: ~10 h
Charger: Battery charging time: ~24 h

Dimensions and weight

| | Receiver | Charger |
|----------|---------------|-----------------|
| ■ Height | 49 mm, 1.9" | 100 mm, 3.9" |
| ■ Width | 38 mm, 1.5" | 95 mm, 3.7" |
| ■ Depth | 12 mm, 0.5" | 117 mm, 4.6" |
| ■ Weight | 30 g, 1.1 oz. | 300 g, 10.6 oz. |

Visit LEDs

The Visit LEDs normally indicate the following:

- Orange LED, pacifier symbol
The baby monitor is activated
- Green LED, door symbol
The door transmitter is activated
- Yellow LED, telephone symbol
The phone transmitter is activated
- Red LED, fire symbol
The smoke alarm is activated
- Orange and red LEDs blink alternately
The CO alarm is activated

Environment

- For indoor use only
Operating temperature
0° to 35° C, 32° to 95° F
- Relative humidity
15% to 90%, non-condensing

Frequency and coverage

- Frequency: 868.3 MHz
- Coverage:
50 – 250 m (55 - 273 yd)
Coverage depends on the radio frequency, building's characteristics and the combination of transmitters and receivers.


Accessories

- BE1270 Bed shaker

Visit wrist receiver

Getting started

- 1 Pull the battery tab on the charger and connect the power supply to the mains outlet. The mains LED lights up in green. Place the wrist receiver in the charger and charge it for at least 2 hours. The charging LED is green during charging.
- 2 To test the radio link you need a Visit transmitter. Press the test button/s on the transmitter.
- 3 The receiver starts to vibrate and lights up a Visit LED. If a bed shaker is connected during charging, it will vibrate. If nothing happens, see **Troubleshooting**.

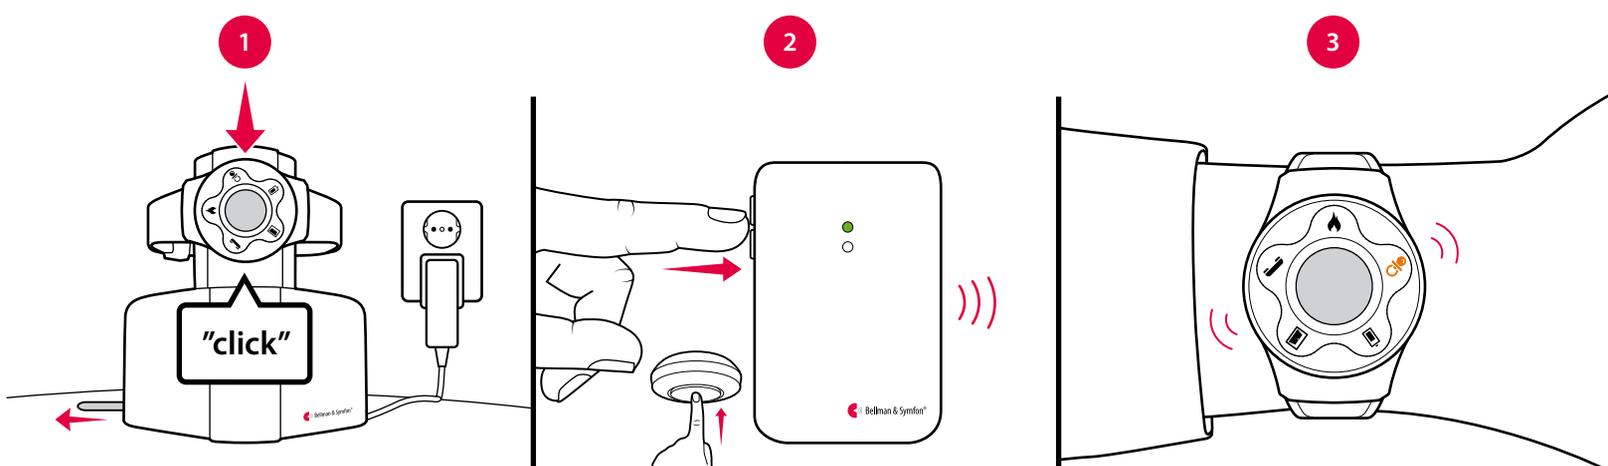

Default signal pattern

When a transmitter is activated, the wrist receiver lights up an LED and starts to vibrate with a certain pace. This is called signal pattern. The transmitters determine the pattern, and the default is as follows:

Activated transmitter

- Door transmitter
- Push button transmitter
- Telephone transmitter
- Baby monitor
- Smoke alarm
- CO alarm

Wrist receiver LED

- Green
- Green
- Yellow
- Orange
- Red
- Orange and red

Wrist receiver / bed shaker vibration

- Slow ■□□□
- Slow ■□□□
- Medium ■□■□
- Fast ■■■■■■
- Long ■■■□
- Long ■■■□

Changing the signal pattern

The signal pattern can only be changed on the transmitters. See **Changing the signal pattern** for the relevant transmitter.

LED indications

When the wrist receiver battery is nearly depleted, the battery LED starts to blink in yellow. The charging time is up to 8 h. The charger is equipped with a battery backup and the charger LEDs indicate the following:

LED

- Charging LED
- Mains LED
- Mains LED

Indication

- Green light
- Green light
- Green blinks

Status

- The receiver battery is being charged.
- The charger is powered by mains voltage.
- The charger is powered by the battery backup.

Visit wrist receiver

Changing the radio key


If your Visit system is activated for no reason, there is probably a nearby system that triggers yours. In order to avoid radio interference, you need to change the radio key on all units. The radio key switches are located on the **transmitters**.

Here is how you change the radio key:

- 1 Open the transmitter cover and move any radio key switch to the up (on) position to change the radio key. See **Changing the radio key** for the relevant transmitter.
- 2 Press and hold the function button on the wrist receiver until the green and yellow Visit LEDs blink alternately. Release the button.
- 3 Press the test button/s on the transmitter within 30 seconds to send the new radio key.
- 4 All Visit LEDs on the receiver blink 5 times to show that the radio key has been changed. It then returns to normal mode.



Note: All Visit units must be set to the same radio key in order to operate as a group.

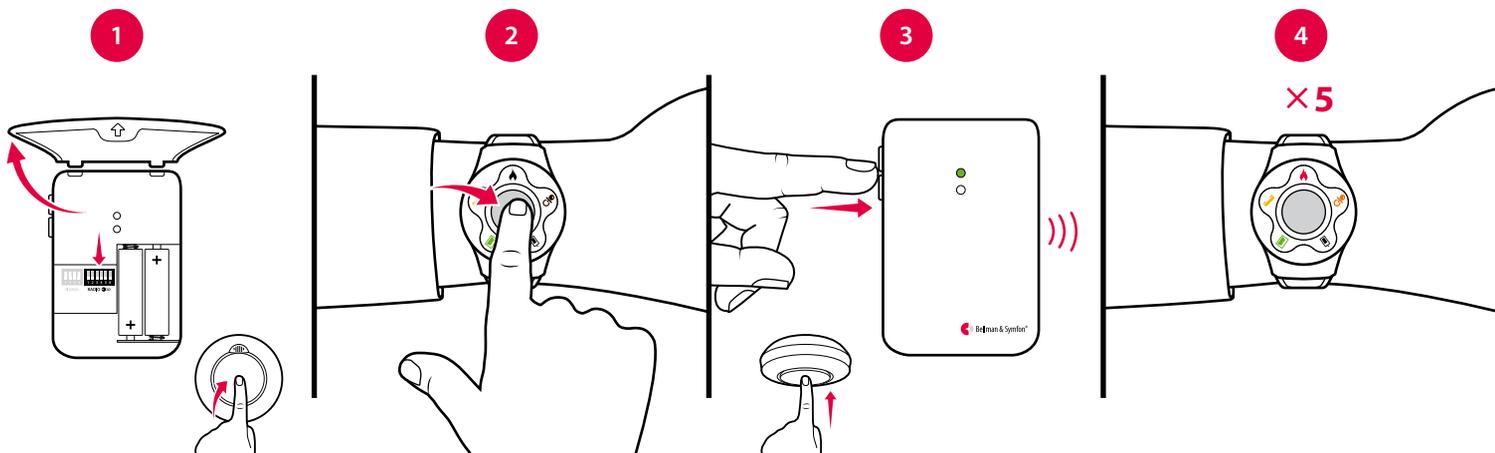

Accessories


The wrist receiver can be complemented with the following accessory:

■ BE1270 Bed shaker

Wakes you with vibrations if anything happens while you are asleep. Connect it to the charger and slide it under your pillow or mattress.

Note: The bed shaker only works when the wrist receiver is placed in the charger. The receiver will not vibrate during charging, but the Visit LEDs will act as usual.

Press the bed shaker test button on top of the charger to try the bed shaker vibration.

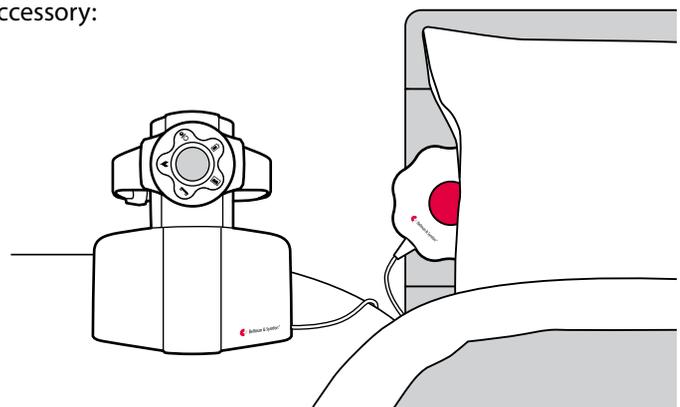

Warning! The wrist receiver and charger can **ONLY USE RECHARGEABLE NiMH BATTERIES**. Non-rechargeable batteries will start to leak during charging and the battery acid will damage the electronics in the wrist receiver and charger. The resulting damage is not covered by warranty.

Visit wrist receiver

Advanced programming

By using advanced programming, you can customize the signal pattern from a specific transmitter and event, displaying the LED color and vibration pattern of your choice. The advanced programming overrides the radio key and pairs the units via the serial number. Please note that smoke alarms cannot be programmed for safety reasons.

Note: The transmitter must be activated as it is intended to be used in the system to generate the right signal. This means that you can't always use the transmitter test button (see **Default signal pattern** for the relevant transmitter).

Here is how you program the wrist receiver:

- 1 Press and hold the function button on the receiver. The green and yellow Visit LEDs will start to blink alternately. While still holding down the button, activate the desired transmitter as intended. The battery LED on the receiver lights up in yellow to show that you are in advanced programming mode. Release the button.
- 2 Scroll through the different **Visit LED options** by pressing the function button on the receiver. Select the desired Visit LED color by holding down the function button until the battery LED goes out and lights up again.
- 3 Scroll through the different **vibration options** by pressing the function button on the receiver. Select the desired vibration pattern by holding down the function button until the battery LED goes out and lights up again.
- 4 The wrist receiver will now show the new Visit LED color and vibration pattern. Press the function button briefly to end the demonstration. After a short while, it will return to normal mode.

Deleting the advanced programming

Follow the procedure below to delete the advanced programming.

- 1 Hold down the function button on the receiver until the green and yellow Visit LEDs blink alternately. Release the button.
- 2 Press the function button on the receiver 3 times in quick succession.
- 3 All Visit LEDs will light up for ~2 seconds to show that it has been deleted.

Troubleshooting

Most problems with the wrist receiver can be solved quickly by following the advice below.

| If | Try this |
|---------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The receiver seems to be turned off | <ul style="list-style-type: none"> ▪ The battery is depleted. Charge or replace it with a VARTA V40H NiMH battery. |
| The battery LED blinks in yellow | <ul style="list-style-type: none"> ▪ The battery level is low. Charge or replace it with a VARTA V40H NiMH battery. |
| The receiver is not charging | <ul style="list-style-type: none"> ▪ Check that the receiver is placed correctly in the charger and that the power supply is connected. The mains LED and charging LED should be lit. ▪ Charge or replace the backup batteries with four 1.2 V NiMH rechargeable batteries. |
| The receiver does not respond when a transmitter is activated | <ul style="list-style-type: none"> ▪ Check the transmitter batteries and connections. ▪ Move the receiver closer to the transmitter to make sure it's within radio range. ▪ Check that the receiver is set to the same radio key as the other units in the Visit system, see Changing the radio key. |
| The receiver is activated for no apparent reason | <ul style="list-style-type: none"> ▪ There is probably another Visit system installed nearby that triggers your system. Change the radio key on all units, see Changing the radio key. |
| The bed shaker does not vibrate | <ul style="list-style-type: none"> ▪ Check that the bed shaker is connected and that the receiver is placed in the charger. |