



Bellman & Symfon®



BE1491

Visit baby monitor





Manufacturer


Bellman & Symfon Group AB
Södra Långebergsgatan 30
436 32 Askim Sweden
Phone +46 31 68 28 20
E-mail info@bellman.com
bellman.com



Revision: BE1491_084MAN1.0

Date of issue: 2022-02-21

TM and © 2022 Bellman & Symfon AB. All rights reserved.

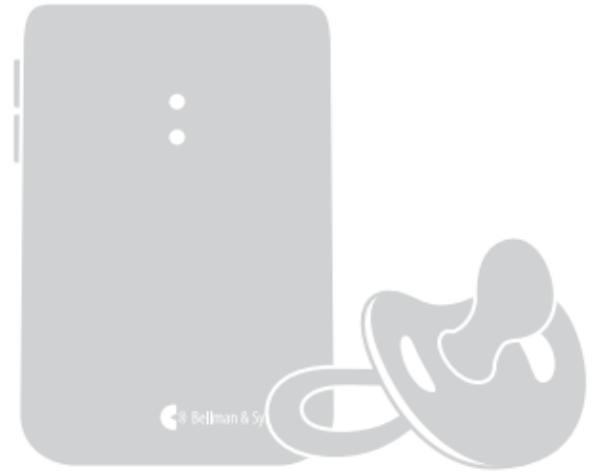


Baby monitor

BE1491

Brugervejledning	DA
Benutzerhandbuch	DE
User manual	EN
Manual del usuario	ES
Käyttöopas	FI
Mode d'emploi	FR
Gebruiksaanwijzing	NL
Brukerhåndbok	NO
Bruksanvisning	SE
Installer's guide	EN


Übersicht

An/Aus und Einstellung LED Anzeige Ext. Trigger Eingang Mikrofon
Eingang

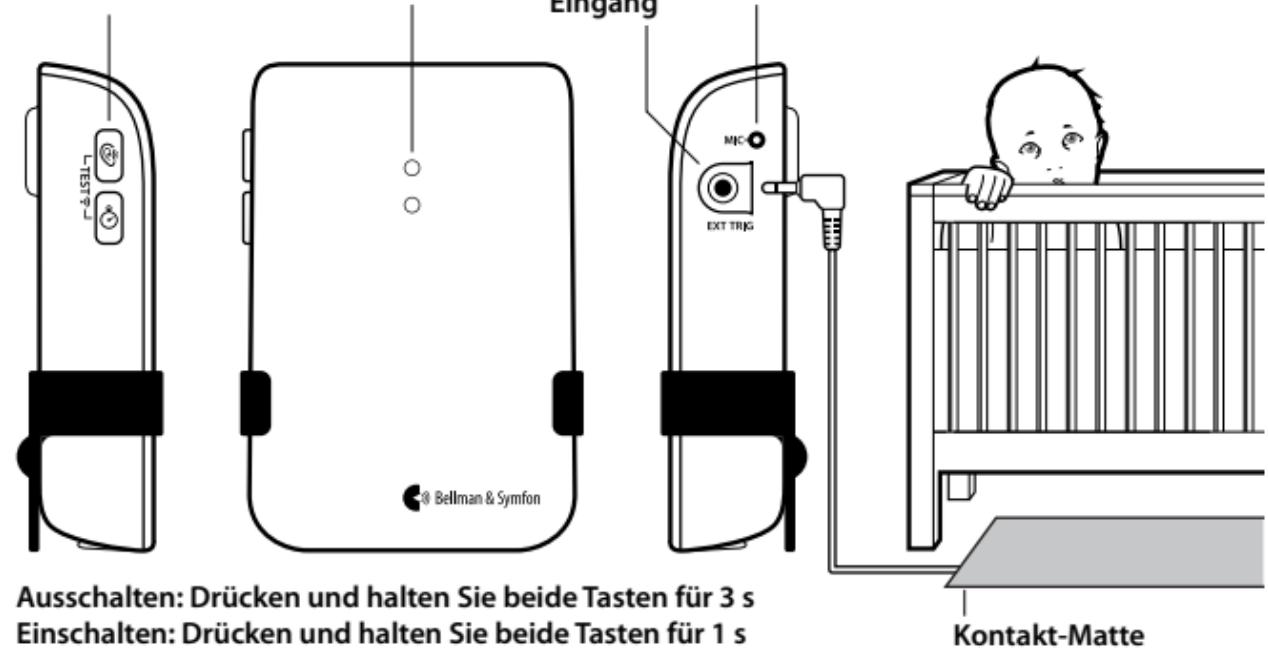


Installation

- 1 Ziehen Sie am Batterie Streifen um den Babyruf-Sender zu aktivieren.
- 2 Stellen Sie den Babyruf-Sender auf dem Nachttisch oder hängen Sie ihn mit der Schraube an die Wand. Der empfohlene Abstand ist 0,5 bis 2 m, außerhalb der Reichweite des Kindes.

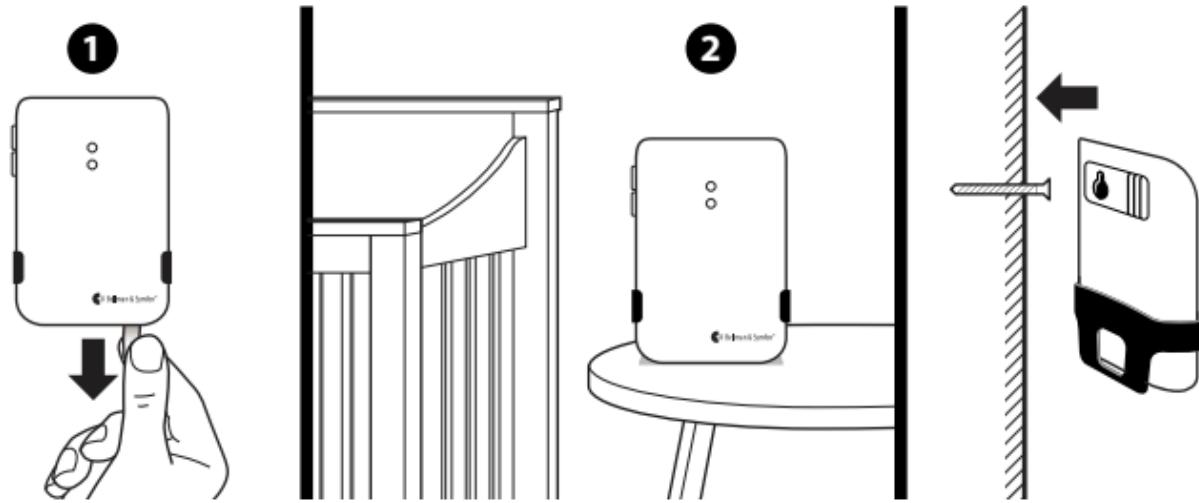

Testen

- 1 Stellen Sie sich an das Bett des Kindes und machen Lärm.
- 2 Am Visit Empfänger leuchtet einen Schnuller Symbol auf und benachrichtigt mit Ton, Licht oder Vibrationen (je nach Empfänger). Wenn er nicht reagiert, lesen Sie den Abschnitt **Settings**.

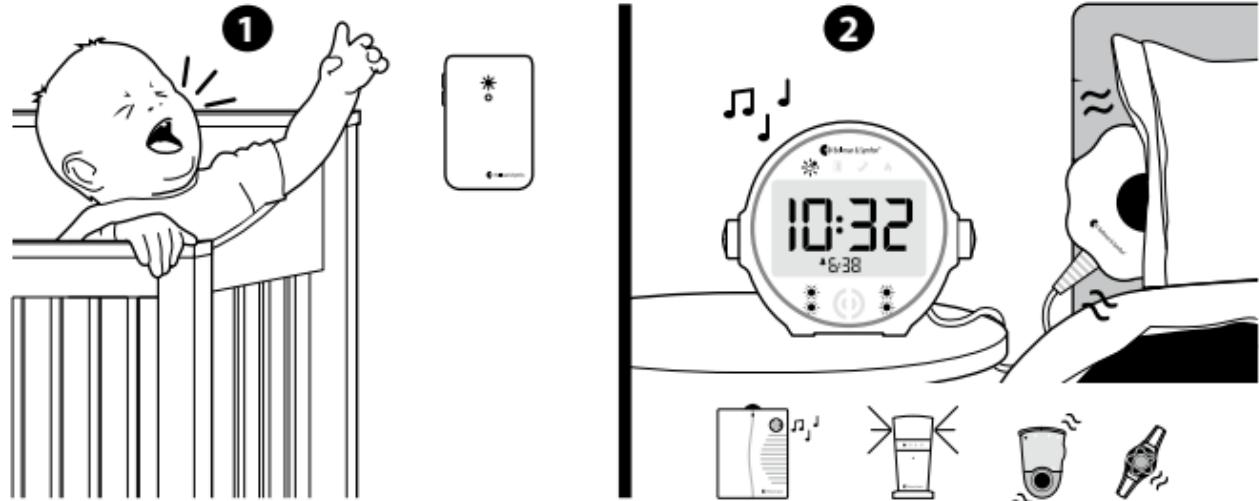

Einstellungen

Die Tasten für die Empfindlichkeit und Verzögerung sind auf der linken Seite des Babyruf-Senders. Wenn Sie die Taste drücken, zeigt die LED die aktuelle Einstellung. Drücken Sie mehrmals, um die Einstellung anzupassen.

- Wenn der Babyruf-Sender nicht auslöst, wenn das Baby schreit – erhöhen Sie die Empfindlichkeit.
- Wenn der Babyruf-Sender zu leicht auslöst - reduzieren Sie die Empfindlichkeit.
- Wenn der Babyruf-Sender zu schnell oder zu langsam aktiviert wird – variieren Sie die Einstellung der Verzögerung.




Empfindlichkeit

Rote LED	65 dB
Orange LED	75 dB
Grüne LED	85 dB




Verzögerung

Rote LED	30 s
Orange LED	10 s
Grüne LED	1 s

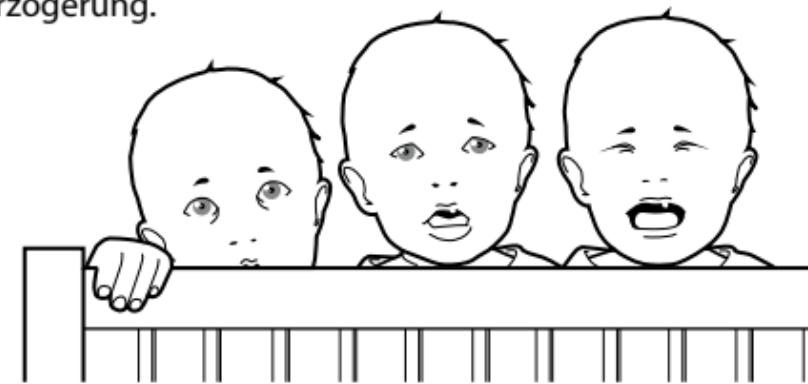

Installieren einer Kontaktmatte

Durch die Verwendung einer Kontaktmatte können Sie auch benachrichtigt werden, wenn Ihr Kind aus dem Bett steigt. Legen Sie einfach die Matte vor das Bett, verbinden Sie diese mit dem Babyruf-Sender und es wird signalisiert, wenn Ihr Kind aufsteht.

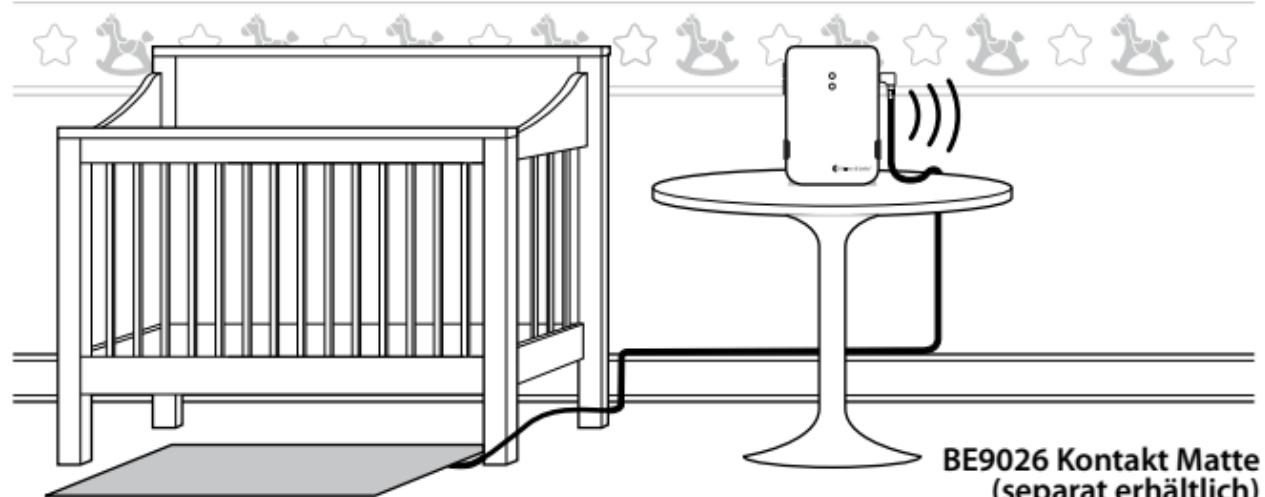

BE9026 Kontakt Matte
(separat erhältlich)

Technische Information

Stromversorgung

Batterieleistung : 2 x 1,5 V AA (LR6) Lithium oder Alkali-Batterien.

Leistungsaufnahme

Aktiv < 70 mA, inaktiv < 400 µA

Betriebsdauer

Alkali ~ 6 Monate, Lithium ~1 Jahr

Aktivierung

Über Testknopf, Mikrofon oder eine Kontaktmatte über ext. Trigger

Funkfrequenz

314,91 MHz, 433,92 MHz oder 868,3 MHz je nach Region

Max Ausgangsleistung

4,7 dBm

Reichweite

Von 50 bis 250 m, je nach Funkfrequenz. Die Reichweite wird durch Wände, große Objekte und andere Funksender reduziert.

Anzahl der Funkschlüssel

64 als Standard. Bis zu 256 mit optionaler Software.

DE

Zusätzliche Informationen



Beachten Sie: Stellen Sie den Babyruf-Sender niemals in die Wiege, Bett oder Kinderlaufstall des Kindes.

Verwendung, Transport und Lagerung

Informationen finden Sie im **Installer's Guide**.

Wartung und Reinigung

Wartungsfrei. Reinigung mit einem nur leicht feuchten Tuch. Nicht für den Wiedereinsatz durch andere Personen vorgesehen.

Sicherheit und Vorschriften

Informationen finden Sie im **Installer's Guide**.

Service und Support

Informationen finden Sie im **Installer's Guide**.

Fehlerbehebung

Wenn	Versuchen sie
Ein grünes Licht am Babyruf - Sender erscheint - aber der Empfänger wird nicht aktiviert	<ul style="list-style-type: none"> Überprüfen Sie die Batterien und Stecker des Babyruf-Senders und des Empfängers. Platzieren Sie den Empfänger näher zum Babyruf-Sender. Überprüfen Sie, dass die Babyruf-Sender und Empfänger auf den gleichen Funkkanal eingestellt sind. Siehe Changing the radio key im Installer's Guide.
Der Babyruf-Sender nicht aktiviert wird, wenn das Baby weint	<ul style="list-style-type: none"> Platzieren Sie den Babyruf-Sender näher zum Kind oder erhöhen Sie die Empfindlichkeit, siehe Einstellungen. Bitte beachten Sie: Achten Sie darauf, das der Babyruf-Sender außerhalb der Reichweite des Kindes ist. Stellen Sie den Babyruf-Sender niemals in die Wiege, Bett oder Kinderlaufstall.

Wenn	Versuchen sie
Der Babyruf-Sender zu leicht aktiviert wird	<ul style="list-style-type: none"> Reduzieren Sie die Empfindlichkeit oder bewegen Sie den Babyruf-Sender weiter vom Kind weg, siehe Settings.
Der Babyruf-Sender zu schnell aktiviert wird	<ul style="list-style-type: none"> Erhöhen Sie die Verzögerung, siehe Settings.
Der Babyruf-Sender zu langsam aktiviert wird	<ul style="list-style-type: none"> Reduzieren Sie die Verzögerung, siehe Settings.
Der Empfänger ohne Grund aktiviert wird	<ul style="list-style-type: none"> Ein anderes Visit System könnte in der Nähe Ihres Systems auslösen. Ändern Sie den Funkschlüssel bei allen Geräten, siehe Changing the radio key im Installer's Guide.
Zwei orangefarbene Lichter leuchten alle 10 s auf	<ul style="list-style-type: none"> Wechseln Sie die Batterien. Verwenden Sie nur 1,5 V AA (LR6) Lithium oder Alkalie-Batterien.



Installer's Guide

78 Introduction

80 Installation

82 Testing

84 Settings

85 Default indication and signals

86 Changing the radio key

90 Trouble shooting

92 Technical information

Introduction

Function

The baby monitor is part of the Visit alerting system that helps people with hearing loss to notice signals in their home. When your child cries, the baby monitor signals the Visit receiver that notifies you with sound, lights or vibrations (depending on the receiver). This way you are always close to your baby.

Activation


The baby monitor can be activated by either:

- The test buttons (press simultaneously)
- The built-in microphone
- The BE9026 Contact mat accessory (connected to the Ext trig input)

Settings


The baby monitor allows you to adjust the sensitivity and delay and you can set a unique signal for each child, so you know who needs your attention.

Overview

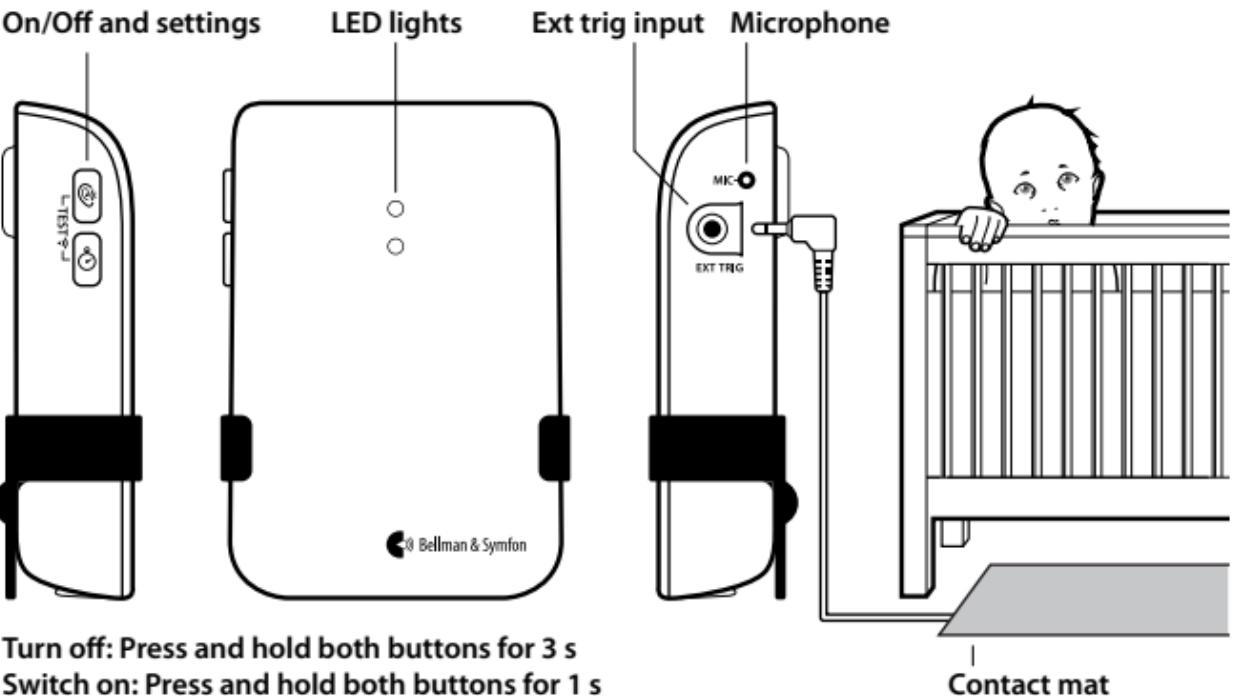


Installation

- 1 Remove the battery pull tab to start the baby monitor.
- 2 Place the baby monitor on the nightstand or hang it on the wall with the screw and plug. The recommended distance is 0.5 - 2 m, out of reach from the child.

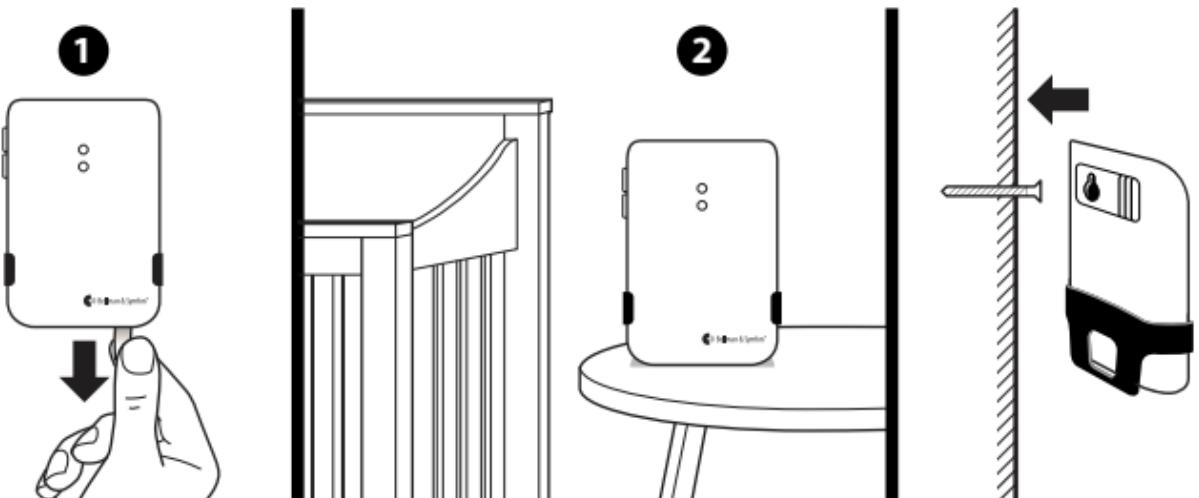

Installing a contact mat


By using a contact mat, you can also be notified if your child gets out of bed. Just place the mat in front of the crib, connect it to the baby monitor and it will tell you when your child steps on it.

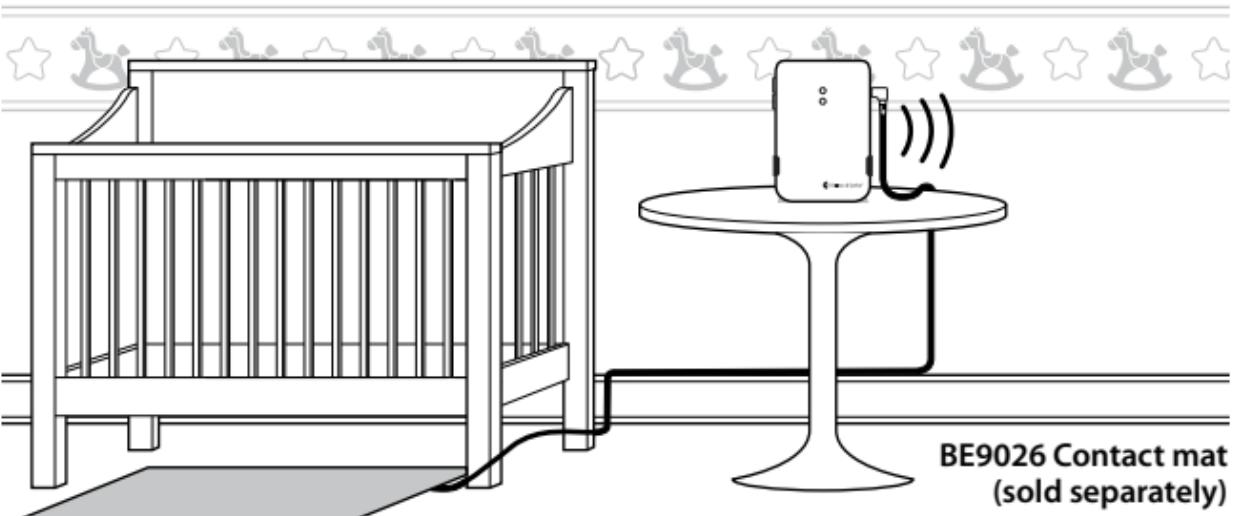

BE9026 Contact mat
(sold separately)

Testing

- 1 Stand by the child's bed and make a noise.
- 2 The Visit receiver lights up a pacifier symbol and indicates with sound, lights or vibrations (depending on the receiver). If it doesn't react, read the section **Advanced testing**.

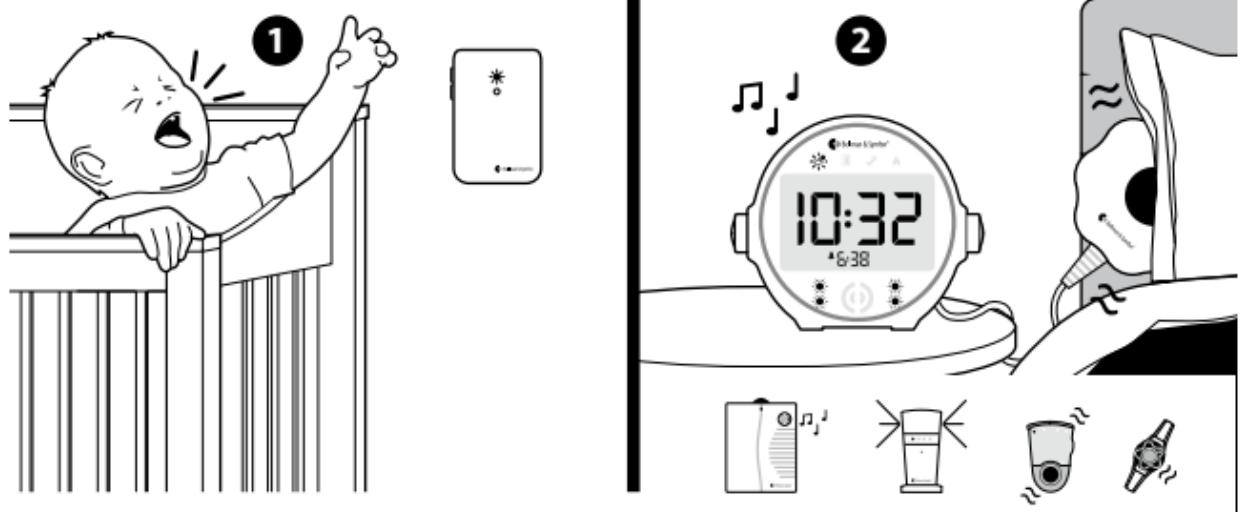

Advanced testing

Testing the baby monitor is easy. First, make sure that the baby monitor is installed properly. For instructions, read the section **Installation**.

Using the test button

Press both test buttons simultaneously.

- 1 The baby monitor's LED lights up to show that a radio signal is transmitted.
- 2 The receiver's pacifier symbol lights up to show that the signal was received.

Using the microphone

Activate the baby monitor by whistling or speaking into the microphone.

- 1 The baby monitor's LED lights up to show that a radio signal is transmitted.
If you have adjusted the delay, it will be postponed as shown on page 84.
- 2 The receiver's pacifier symbol lights up to show that the signal was received.
If you have customized the signal pattern, it will blink as shown on page 88.

If it doesn't work as described, read the section **Troubleshooting**.

Settings

The buttons for sensitivity and delay are located on the baby monitor's left side. When you press the button, the LED shows the current setting. Then press repeatedly to adjust the setting.


- If the baby monitor isn't activated when the baby cries – increase the sensitivity.
If the baby monitor is activated too easily – reduce the sensitivity.
- If the baby monitor is activated too fast or too slow – adjust the delay.

Sensitivity

Red LED	65 dB
Orange LED	75 dB
Green LED	85 dB

Delay

Red LED	30 s
Orange LED	10 s
Green LED	1 s

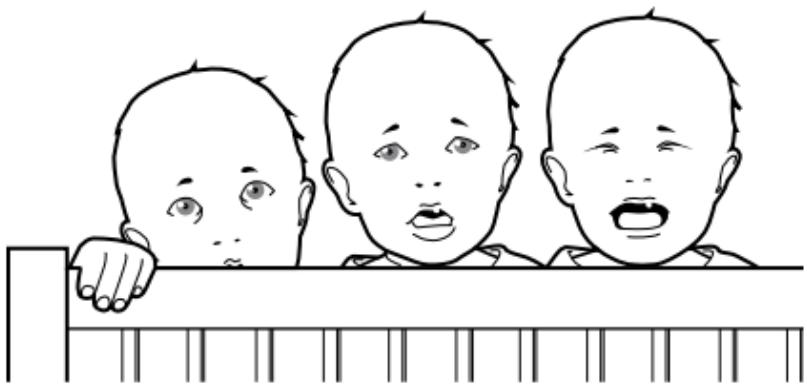

Default indication and signal

Transmitter indication

When the baby monitor is activated, the LED indicator lights up in green. This means that the batteries are in good condition. If an orange light appears, it's time to change the batteries. Only use 1.5 V AA (LR6) lithium or alkaline batteries.

Receiver signal

When a receiver is activated, it signals with sound, flashes or vibrations. The default signal pattern is as follows:

Signal pattern 868/315 MHz 433 MHz

Baby monitor		Receiver signal pattern			
Source	LED	LED	Sound	Vibration	Flash
Baby voice	Green, top	Orange light	Baby melody	Fast Yes	Yes
Contact mat	Green, bottom	Green light	1x door chime, low	Slow Yes	Yes
Baby voice	Green, top	Orange light	Baby melody	Long Yes	Yes
Contact mat	Green, bottom	Green light	1x door chime, low	Long Yes	Yes

Changing the radio key

If you install multiple systems, you can set a unique radio key for each system to avoid interference. Move any radio key switch **A** to the up=on position to change radio key.

Please note:

All Visit products within the same system must be set to the same radio key in order to operate as a group.

All radio key switches are positioned down=off per default.



Customizing the signal

The baby monitor controls the signal pattern on the receiver. By moving a signal switch **B** up=on you can set a unique signal for each baby. Note that you need to move the other switches down.



Signal output for 868 MHz and 315 MHz

Baby monitor		Receiver signal pattern			
Switch	Source	LED	Sound	Vibration	Flash
	Test button or Baby monitor 1	Orange light	Baby melody	Fast ■■■■■	Yes
	Contact mat 1	Green light	1 x door chime, low	Slow ■□□□	Yes
	Test button or Baby monitor 2	2 x orange blinks	Baby melody	Fast ■■■■■	Yes
	Contact mat 2	2 x green blinks	2 x door chime, low	Slow ■□□□	Yes
	Test button or Baby monitor 3	3 x orange blinks	Baby melody	Fast ■■■■■	Yes
	Contact mat 3	3 x orange blinks	Baby melody	Fast ■■■■■	Yes
	Test button or Baby monitor 4	Orange blinks	Baby melody	Fast ■■■■■	Yes
	Contact mat 4	Orange blinks	Baby melody	Fast ■■■■■	Yes

Signal output for 433 MHz

Baby monitor		Receiver signal pattern			
Switch	Source	LED	Sound	Vibration	Flash
	Test button or Baby monitor 1	Orange light	Baby melody	Long ■■■■■	Yes
	Contact mat 1	Green light	1 x door chime, low	Long ■■■■■	Yes
	Test button or Baby monitor 2	Orange light	2x ring signal, low	Medium ■□■□	Yes
	Contact mat 2	Green light	1x ring signal, high	Medium ■□■□	Yes
	Test button or Baby monitor 3	Orange light	2x door chime, low	Long ■■■■■	Yes
	Contact mat 3	Orange light	2x door chime, low	Long ■■■■■	Yes
	Test button or Baby monitor 4	Orange light	Baby melody	Long ■■■■■	Yes
	Contact mat 4	Orange light	Baby melody	Long ■■■■■	Yes

Trouble shooting

If	Try this
A green light appears on the baby monitor but the receiver is not activated	<ul style="list-style-type: none"> Check the baby monitor's and the receiver's batteries and plugs. Move the receiver closer to the baby monitor. Check that the baby monitor and the receiver are set to the same radio key. For more information, read the section Changing the radio key.
The baby monitor is not activated even though the baby is crying	<ul style="list-style-type: none"> Move the baby monitor closer to the baby or increase the microphone's sensitivity, see Settings. Please note: Always make sure the baby monitor is out of the child's reach. Never place the baby monitor in the child's crib or playpen.

If	Try this
The baby monitor is activated <i>too easily</i>	<ul style="list-style-type: none"> Reduce the sensitivity or move the baby monitor further away from the crib, see Settings.
The baby monitor is activated <i>too fast</i>	<ul style="list-style-type: none"> Increase the delay. For more information, read the section Settings.
The baby monitor is activated <i>too slow</i>	<ul style="list-style-type: none"> Reduce the delay. For more information, read the section Settings.
The receiver is activated for no reason	<ul style="list-style-type: none"> There is probably another Visit system nearby that triggers your system. Change the radio key on all units, see Changing the radio key.
Two orange lights appear every 10s	<ul style="list-style-type: none"> Change the batteries. Only use 1.5 V AA (LR6) lithium or alkaline batteries.

Technical information

Power supply

Battery power: 2 x 1.5 V AA (LR6) lithium or alkaline batteries.

Power consumption

Active < 70 mA, Idle position < 400 µA

Operating time

Alkaline ~ 6 months, Lithium ~ 1 year

Activation

Via the test buttons, microphone or a contact mat via the ext trig

Radio frequency

314.91 MHz, 433.92 MHz or 868.3 MHz depending on region

Coverage

50 - 250m (55 - 273yd) depending on radio frequency. Coverage is reduced by walls, large objects and other radio transmitters.

Number of radio keys

64 as standard. Up to 256 with optional software.

Additional information

Security

 Always make sure the baby monitor is out of the child's reach.
Never place the baby monitor in the child's crib or playpen.

Operating temperature

0° – 35° C, 32° – 95° F

Transport and storage temp.

-10° – 50° C, 14° – 122° F

Relative humidity

15% – 90% (non condensing)

Maintenance and cleaning

Maintenance free. Clean with a dry cloth. Don't use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.

Warranty and service

If the product appears to be damaged or doesn't function properly, follow the advice in this booklet. If it still doesn't function properly, contact your retailer for info about obtaining warranty service.

FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: WMSBETXBC

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For a complete Declaration of Conformity please contact the Bellman & Symfon European office.

Industry Canada statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interfe-

rence.(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with the Canadian ICES-003.

IC: 6693A-BETXTE2

Zusätzliche Information

Nur Innen verwenden. Wartungsfrei. Reinigung mit einem nur leicht feuchten Tuch.

HMV 16.99.09.0045